

EN	<p>Dear Customer,</p> <p>Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continued the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH.</p> <p>We hope you enjoy your Gigaset.</p>	DA	<p>Kære Kunde,</p> <p>Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer.</p> <p>Vi håber, du får meget glæde af din Gigaset.</p>
DE	<p>Sehr geehrte Kundin, sehr geehrter Kunde,</p> <p>die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführte. Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen.</p> <p>Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p>	FI	<p>Arvoisa asiakkaamme,</p> <p>Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yhtiksen oikeudenomistaja, joka jatkoi puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.</p> <p>Toivotamme Teille paljon iloa Gigaset-laitteestanne.</p>
FR	<p>Chère Cliente, Cher Client,</p> <p>la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH.</p> <p>Nous vous souhaitons beaucoup d'agrément avec votre Gigaset.</p>	SV	<p>Kära kund,</p> <p>Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH.</p> <p>Vi önskar dig mycket nöje med din Gigaset.</p>
IT	<p>Gentile cliente,</p> <p>la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH.</p> <p>Le auguriamo tanta soddisfazione con il vostro Gigaset.</p>	NO	<p>Kjære kunde,</p> <p>Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH.</p> <p>Vi håper du får stor glede av din Gigaset-enhet.</p>
NL	<p>Geachte klant,</p> <p>Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.</p> <p>Wij wensen u veel plezier met uw Gigaset.</p>	EL	<p>Αγαπητή πελάτισσα, αγαπητέ πελάτη,</p> <p>η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εμπορική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης αποτελούν επομένως δηλώσεις της Gigaset Communications GmbH.</p> <p>Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.</p>
ES	<p>Estimado cliente,</p> <p>la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH.</p> <p>Le deseamos que disfrute con su Gigaset.</p>	HR	<p>Poštovani korisnici,</p> <p>Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH.</p> <p>Nadamo se da sa zadovoljstvom koristite svoj Gigaset uređaj.</p>
PT	<p>SCaros clientes,</p> <p>Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH.</p> <p>Desejamos que tenham bons momentos com o seu Gigaset.</p>	SL	<p>Spoštovani kupec!</p> <p>Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.</p> <p>Želimo vam veliko užitkov ob uporabi naprave Gigaset.</p>

CS	Vážení zákazníci, společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále přejala segment produktů Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je třeba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.	PL	Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie oświadczenia firm Siemens AG i SHC, które można znaleźć w instrukcjach obsługi, należy traktować jako oświadczenia firmy Gigaset Communications GmbH. Życzymy wiele przyjemności z korzystania z produktów Gigaset.
SK	Vážený zákazník, Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápať ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní.	TR	Sayın Müşterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset işletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kılavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapılmış bildiriler olarak algılanmalıdır. Gigaset'ten memnun kalmanızı ümit ediyoruz.
RO	Stimate client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul său, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmații efectuate de Siemens AG sau SHC și incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparține Gigaset Communications GmbH. Sperăm ca produsele Gigaset să fie la înălțimea dorințelor dvs.	RU	Уважаемый покупатель! Компания Gigaset Communications GmbH является правопреемником компании Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), которая, в свою очередь, приняла подразделение Gigaset в свое управление от компании Siemens AG. Поэтому любые заявления, сделанные от имени компании Siemens AG или SHC и встречающиеся в руководствах пользователя, должны восприниматься как заявления компании Gigaset Communications GmbH. Мы надеемся, что продукты Gigaset удовлетворяют вашим требованиям.
SR	Poštovani potrošaču, Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu naći u korisničkim uputstvima treba tumačiti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ćete uživati u korišćenju svog Gigaset uređaja.		
BG	Уважаеми потребители, Gigaset Communications GmbH е правопреемникът на Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), която на свой ред продължи бизнеса на подразделението Siemens AG. По тази причина всякакви изложения, направени от Siemens AG или SHC, които се намират в ръководствата за потребителя, следва да се разбират като изложения на Gigaset Communications GmbH. Надяваме се да ползвате с удоволствие вашия Gigaset.		
HU	Tisztelt Vásárló! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni. Reméljük, megelégedéssel használja Gigaset készülékét.		



Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

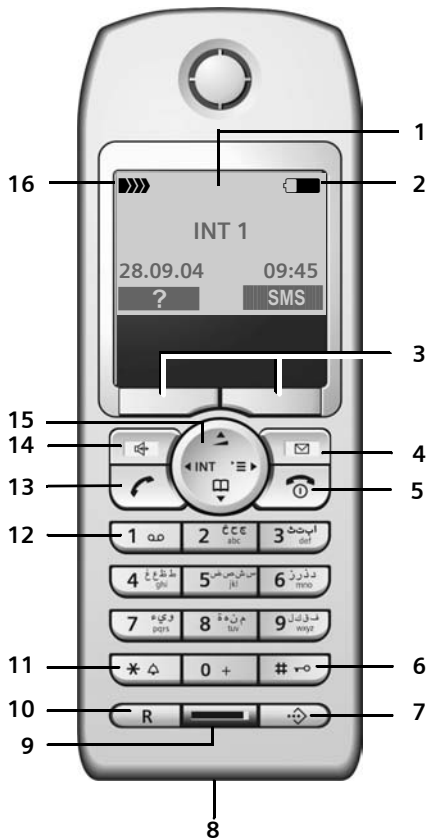
© Siemens AG 2004
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.siemens-mobile.com/gigaset

Gigaset S445

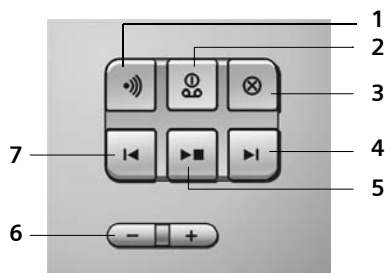
Gigaset

Handset at a glance



- 1 **Display (screen)** in idle status
- 2 **Battery charge condition**
 [Battery icon] (flat to full)
 [Battery icon] flashes: battery almost flat
 [Battery icon] flashes: battery charging
- 3 **Display keys** (page 10)
- 4 **Message key**
 Access to calls and messages lists;
 Flashes: new message or new call.
- 5 **End call key, On/Off key**
 End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**
 Keypad lock on/off (press and hold)
- 7 **Call-by-Call list key**
 Open Call-by-Call list
- 8 **Connection socket** for headset and PC interface
- 9 **Microphone**
- 10 **R key**
 Insert a dial pause (press and hold)
- 11 **Star key**
 Ringtones on/off (press and hold), Toggle between upper/lower case and digits
- 12 **Key 1**
 Select answering machine/T-Net box – answering machine in network (press and hold)
- 13 **Talk key**
 Answer a call, open last number redial list (press briefly), start dialling (press and hold)
- 14 **Handsfree key**
 Switch between earpiece and handsfree mode;
 Lights up: handsfree activated;
 Flashes: incoming call, automatic last number redial
- 15 **Control key** (page 9)
- 16 **Signal strength**
 [Signal bars] (high to low)
 [Signal bars] flashes: no reception

Base station at a glance



Using the keys on the base station, you can operate the integrated answering machine and register the handset to the base station.

- 1 Registration/Paging key
Press briefly: search for handsets "Paging", see page 41.
Register handsets and DECT devices (press and hold), see page 40
- 2 On/Off key: activate/deactivate answering machine.
Lights up: answering machine is activated.
Flashes: at least one new message is present.

During message playback:

- 3 Delete current message.
- 4 Skips to next message (press once) or next message but one (press twice).
- 5 Playback/Stop key
playback new messages from answering machine or cancel the playback (press briefly),
playback new and old messages (press and hold),
- 6 Adjust volume during message playback:
[-] = quieter; [+] = louder.
While an external call is being signalled:
adjust ringtone volume.
- 7 Skips back to beginning of message (press once) or to previous message (press twice).

Please note:

- ◆ If the answering machine is being operated from a handset or if it is recording a message, it cannot be operated from the base station.
- ◆ If you deactivate the answering machine but the On/Off key continues to flash, there is at least one new message on the answering machine that you have not yet played back.

Contents

Handset at a glance	1
Safety precautions	5
Gigaset S445 – More than just a telephone	6
Setting up the telephone for use	6
Installing the base station	6
Range and reception strength	6
Connecting the base station	7
Setting up the handset for use	7
Activating/deactivating the handset ..	9
keypad lock	9
Setting the date and time	9
Operating the handset	9
Control key	9
Display keys	10
Return to idle status	10
Menu guidance	10
Correcting incorrect entries	11
Notes on the user guide	11
Symbols	11
Example: menu input	11
Example: multiple line input	12
Making calls	13
Making an external call	13
Ending a call	13
Answering a call	13
Calling Line Identification	13
Handsfree operation	14
Muting	14
Using the directory and lists ...	15
Directory and call-by-call list	15
Email directory	18
Last number redial list	19
Opening lists with the message key .	19
Making cost-effective calls	22
Linking call-by-call numbers with one number	22
Automatic network provider code (preselection)	22
SMS (text messages)	24
Writing/sending an SMS	24
Receiving an SMS	27
Using attachment data	28
Notification by SMS	29
SMS mailboxes	29
Setting SMS centre	30
SMS info services	31
SMS to a PABX	31
Activating/deactivating the SMS function	31
SMS troubleshooting	32
Operating the answering machine	33
Operation via the handset	33
Activating/deactivating listen in	36
Setting up the answering machine	36
Resetting fast access on the answering machine	37
Operating when on the move (remote operation)	37
Using T-Net box	39
Configuring T-Net box for fast access	39
Viewing a message from T-Net box	39
Using several handsets	40
Registering handsets	40
De-registering handsets	41
Locating a handset ("Paging")	41
Changing the base station	41
Changing the name of the base station	41
Making internal calls	41
Linking internal participants to an external call	42
Changing the name of a handset	43
Changing a handset's internal number	43
Using a handset as a room monitor ..	44
Setting the Walk and Talk mode	45
Using a handset in Walk and Talk mode as a room monitor	46

Contents

Handset settings	47
Shortcuts for functions and numbers	47
Changing the display language	48
Setting the display	48
Setting screen picture	48
Setting night mode	48
Activating/deactivating auto answer ..	49
Adjusting the loudspeaker volume ..	49
Changing ringtones	49
Activating/deactivating first ring muting	50
Sound Manager	50
Activating/deactivating advisory tones	51
Setting the alarm clock	52
Setting an appointment	52
Displaying missed appointments, anniversaries	53
Emergency number	53
Restoring the handset default settings	54
Base station settings	54
Protecting against unauthorised access	54
Changing ringtones	54
Repeater support	54
Restoring default settings to base station	55
Connecting the base station to the PABX	56
Dialling modes and flash time	56
Save access code	56
Setting pauses	57
Switching temporarily to tone dialling (DTMF)	57

Appendix	58
Care	58
Contact with liquid	58
Questions and answers	58
Service (Customer Care)	60
Specifications	61
Default setting	62
PC Interface	63
Writing and editing text	63
Menu tree	65
Accessories	68
Index	71

Safety precautions

Caution:

Read the safety precautions and the user guide before use.

Explain their contents to your children, and the potential hazards associated with using the telephone.



Only use the mains adapter supplied, as indicated on the underside of the base station.



Fit only the **recommended, rechargeable batteries** (page 61)! Do not use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.



Insert rechargeable batteries with the correct polarity and use in accordance with this user guide (polarity symbols are provided in the handset battery compartments).



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station in a bathroom or shower room, as the handset and base station are not splash-proof (page 58).



Switch off your phone (incl. Walk and Talk function) while on board an aircraft. Ensure that it cannot be switched on again accidentally.



Do not use your phone in environments with a potential explosion hazard, e.g. auto paint shops.



If you give your Gigaset to someone else, make sure you also give them the user guide.



Dispose of the batteries and phone in accordance with environmental regulations.

Note:

Not all of the functions described in this manual are available in all countries.

Gigaset S445 – More than just a telephone

Your telephone not only enables you send and receive SMS via the fixed network and store up to 200 telephone numbers and e-mail addresses (page 15) – your telephone can do a whole lot more:

- ◆ You can programme the keys of your phone with important numbers or frequently used functions. The number is then dialled or the function started by simply pressing a key (page 47).
- ◆ You can designate important people as VIPs so you can tell important calls from the ring tone (page 16).
- ◆ Store a voice pattern for important directory entries – the telephone will dial "on command" (page 17).
- ◆ You can store appointments (page 52) and anniversaries (page 17) in your phone and it will remind you of them in advance.

Have fun using your new telephone!

Setting up the telephone for use

The pack contains:

- ◆ one base station Gigaset S445,
- ◆ one Gigaset S44 handset,
- ◆ one mains adapter,
- ◆ one phone cord,
- ◆ two batteries,
- ◆ one battery cover,
- ◆ one belt clip,
- ◆ one user guide.

Installing the base station

The base station and integrated charger is designed for operation in enclosed, dry areas at temperatures ranging from +5 °C to +45 °C.

Set up the base station at a central point in the apartment or house.

Please note:

- ◆ Never expose the telephone to heat sources, direct sunlight, other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Range and reception strength

Range:

- ◆ up to 300 m in the open
- ◆ up to 50 m in buildings

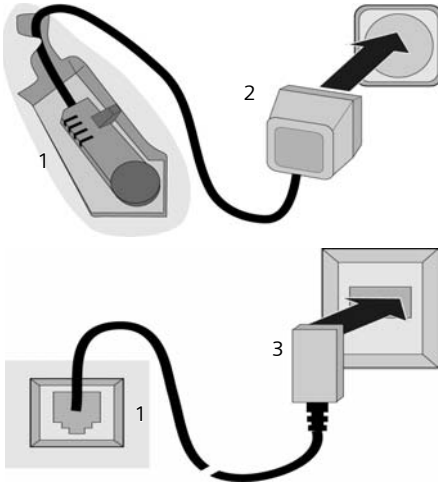
Reception strength:

The display shows the quality of the radio contact between the base station and handset:

- ◆ good to poor: ▬▬▬ ▬▬▬ ▬▬ ▬▬▬
- ◆ no reception: ▬▬▬ flashes

Connecting the base station

- **First** connect the mains unit and **then** the phone jack as shown below and place the cable in the cable channels.

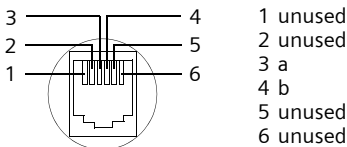


- 1 Underside of base station (enlarged view)
- 2 Mains adapter 230 V
- 3 Phone jack with phone cord

Please note:

- ◆ The mains adapter must be **always connected**, as the phone will not operate without mains connection.
- ◆ If you buy another phone cable, ensure that it has the correct phone jack assignment:

Correct phone jack assignment



Setting up the handset for use

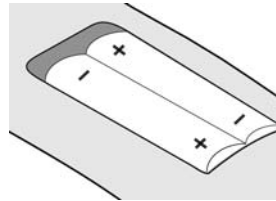
Inserting batteries

Caution:

Use only the rechargeable batteries recommended by Siemens on page 61! Never use conventional batteries (non-rechargeable) or other battery types as this may cause significant damage to health and property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

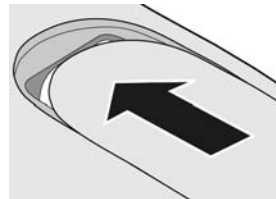
- Fit the batteries with the **correct** polarity (see diagram).

The polarity is indicated in/on the battery compartment.



Closing the battery cover

- Position the cover pointing slightly downwards and push it up until it clicks into position.



Opening the battery cover

- Press below the upper curve on the battery cover and slide down.

Placing handset in base station and registering

- ▶ Place the handset in the base station with its **display facing forward**.

The handset registers automatically. Registration takes around 1 minute. During this process **Regstr.Procedure** appears in the display and the name of the base station flashes e.g. **Base 1**. The handset will be assigned the lowest unassigned internal number (1–6).

This will appear in the display when registration is complete, e.g. **INT 1**. This means that the number 1 has been assigned. If the internal numbers 1–6 are already assigned to other units, the number 6 is overwritten.

Notes:

- Automatic registration is only possible while no-one is making calls using the base station.
- Each key press interrupts the automatic registration.
- If automatic registration does not work, you will have to register the handset manually.
- You can change the name of the handset (page 43).


To charge the batteries, leave the handset in the charging cradle.

Notes:

- When the handset is in the base station, it charges even if it is switched off.
- If the handset has switched itself off because the batteries are flat and is then placed in the cradle, it will switch itself on automatically.
- The handset must only be placed in the designated base station.

For questions and problems see page 58.

Initial charging and discharging of batteries

If the handset is activated, the battery charging process is indicated on the handset by the flashing battery icon .

During handset operation, the battery icon indicates the charge status of the batteries (page 1). The correct charge status can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ To do this, leave the handset in the charging cradle **uninterrupted for 10** hours. Your handset need not be switched on for it to charge.
- ▶ Once the batteries are fully charged, remove the handset from the cradle and do not put it back again until the batteries are fully discharged.

Note:

After the initial charge **and** discharge you may replace your handset in the charging cradle after every call.

Please note:

- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and insert them in again.
- ◆ The batteries may warm up as they are charging. This is not dangerous.
- ◆ After a time the charge capacity of the batteries will decrease for technical reasons.

Your phone is now ready for use.

Your answering machine is set with a standard announcement.

- ▶ Set the date and the time (page 9), for example to ensure the correct time of incoming calls is recorded.

Attaching the belt clip

There are notches on the side of the handset side at approximately the same height as the display for attaching the belt clip.

- ▶ Press the belt clip onto the back of the handset so that the protrusions on the belt clip click into the notches.

The belt clip's clasp must be pointing towards the battery compartment.

Activating/deactivating the handset



Press and **hold** the end call key. You hear the confirmation beep.

Activating/deactivating the keypad lock



Press and **hold** the hash key.

You hear the confirmation beep. The icon appears in the display when the keypad lock is activated.

The key lock deactivates automatically if someone calls you. It re-activates when the call is finished.

Note

You can call the specified emergency number (page 53), even when the keypad lock is activated.

Setting the date and time

- If you have not yet set the date and time, press the display key to open the input field.

To change the time, open the input field via:

→ → **Date/Time**

- Change multiple line input:

Date:

Enter day, month and year with 6 digits.

Time:

Enter hours and minutes with 4 digits, e.g., for 7:15 a.m.

Save

Press the display key.

Operating the handset

Control key



In this user guide, the side of the control key that you will have to press in the relevant operating situations is marked black (up, down, right, left) (e.g. for "press right on the control key").

The control key has a number of different functions:

When the handset is in the idle state



Open the directory.



Open main menu.



Open list of handsets.



Press **briefly**: Setting handset ringtones (page 49).
Press and **hold**: Initiate voice-activated dialling (page 18).

In the main menu and in input fields

Using the control key you can move the cursor up , down , right or left .

In lists and submenus



Scroll up/down line by line.







Open submenu or confirm selection.



Go back one menu level, or cancel.

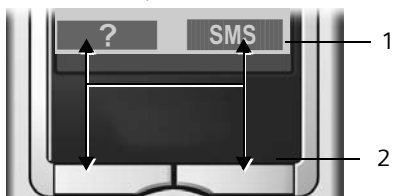
Operating the handset

During an external call

-  Open the directory.
-  Open menu.
-  Initiate an internal consultation.
-  Adjust loudspeaker volume for earpiece and handsfree mode.









Display keys

The functions of the display keys changes depending on the particular operating situation. Example:




- 1 The display keys' current functions are shown in the bottom display line.
- 2 Display keys

The most important display symbols are:

-  Left display key, as long as it has not been assigned a function (page 47).
-  Open the main menu or a context dependent menu.
-  Delete key: deletes one character at a time from right to left.
-  Go back one menu level or cancel operation.
-  Open email directory.
-  Copy number into directory.
-  Divert external call to answering machine.
-  Open the last number redial list.

Return to idle status

You can revert to idle status from anywhere in the menu by proceeding as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Press no key: After 2 minutes the display will return **automatically** to its idle status.


Changes which you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry OK** will be lost.

An example of the display in the idle status is shown on page 1.

Menu guidance

 
 
Your telephone's functions are accessed in a menu that has a number of levels.

Main menu (first menu level)

- ▶ Press  with the handset in idle status to open the main menu.

The main menu functions are displayed on the display as coloured icons.



Accessing a function, i.e. opening the corresponding submenu (next menu level):

- ▶ Navigate to the function using the control key ( and ). The name of the function is displayed in the screen's header row. Press the display key **OK**.

Submenus


The functions in the submenus are displayed as lists.

Accessing a function:

- ▶ Scroll to the function with the control key ( and ) and press **OK**.

Or:

- ▶ Enter the corresponding digit combination (page 65).

Pressing **briefly** on the end call key  returns you to the previous menu level / cancels the operation.

Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press **⬅C** to delete the character to the left of the cursor,
- ◆ insert characters to the left of the cursor,
- ◆ overwrite the character (flashing) when entering the time and date, etc.

Notes on the user guide

This section explains the meaning of certain symbols and typographical conventions that are used in this user guide.

Symbols

Copy Entry / Copy List (example)

Select one of the two menu functions specified.



Save

Enter digits or letters.

The display keys' current functions are shown reverse highlighted in the bottom display line. Press the display key below to launch the function.



Press the top or the bottom of the control key: scroll up or down.



Press the right or left of the control key: e.g. select setting.






/ **0+** / ***△** etc.

Press the matching key on the handset.

Example: menu input

In this user guide, sequences of symbols are used to show you which steps you must carry out. This system is explained below using the example of "setting the display's colour scheme". The things you have to do are explained in the boxes.

 →  → **Display**

- ▶ With the handset in idle status, press on the right of the control key to open the main menu.
- ▶ Select the icon  using the control key – press the control key right, left, up or down.

In the display header, **H/Set Settings** is displayed.

- ▶ Press **OK** on the display key to confirm the function **H/Set Settings**.

You will see the submenu **H/Set Settings**.

- ▶ Press the bottom of the control key repeatedly until **Display** is selected.
- ▶ Press **OK** on the display key to confirm the function.

Colour Scheme

Select and press **OK**.

- ▶ Press the bottom of the control key repeatedly until **Colour Scheme** is selected.
- ▶ Press **OK** on the display key to confirm the function.



Select a colour scheme and press **OK** (✓ = current colour).

- ▶ Press the top or bottom of the control key to select a colour scheme.
- ▶ Press **OK** on the display key to confirm the function.

The selected colour scheme is marked with ✓.



Press and **hold** press (idle status).

- ▶ Press and hold the end call key until the handset returns to idle status.

Example: multiple line input

There are many situations in which you can change the settings of a display or enter data in several lines.

In this user guide, sequences of symbols are used to show you multiple line input. This system is explained using the example of "storing appointments". The things you have to do are explained in the boxes.

You will see the following displayed:

Appoint.:	◀ On ▶
Date:	28.09
Time:	11:11
Notes:	Appoint.

Appoint.:

Select On or Off.

- ▶ Press right or left () on the control key to select **On** or **Off**.

Date:

Enter day/month in 4-digits format.

- ▶ Press the key to move to the next line.

The second line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.

Time:

Enter hours/minutes in 4-digit format.

- ▶ Press the key.

The third line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.

Notes:

Press the display key **Edit**. Enter text (max. of 16 characters) and press **OK**.

- ▶ Press the key.

The fourth line is marked with < > to show it is active.

- ▶ Press the display key **Edit** to open the input field. Enter the text (page 63).
- ▶ Press the display key **OK**.

- ▶ Save changes.

You will see the icon.

- ▶ Press the display key **Save**.

- ▶ Always subsequently press and **hold** the key.

The handset will change to idle status and display the icon .

Making calls

Making an external call


External calls are calls using the public telephone network.

 


Enter the number and press the talk key.

Or:



Press **and hold** the talk key  and then enter the number.

You can cancel the dialling operation with the end call key .

Notes:


- Dialling using the directory, call-by-call list (page 1, page 15) or last number redial list (page 10, page 19) saves time re-entering numbers and network provider prefixes ("call-by-call numbers").
- You can programme the keys of your phone with numbers from the directory (page 47).
- With voice dialling, you can dial numbers simply by saying the name (page 17).

Ending a call








Press the end call key.

Answering a call

The handset indicates an incoming call in three ways: by ringing, by displaying on the screen and by flashing of the hands-free key .

You can take the call in the following ways:

- ▶ Press the talk key .
- ▶ Press the handsfree key .
- ▶ Press the display key   , to divert the call to the answering machine (page 35).

If the handset is in the base station and the **Auto Answer** function is activated (page 49), the handset will take a call automatically when you lift it from of the base station.

If the ringtone is intrusive press the display key **Silence**. You can take the call as long as it remains displayed on the screen.

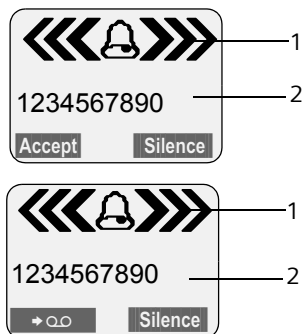
Calling Line Identification

When you receive a call, the caller's number is displayed on the screen if the following conditions are met.

- ◆ Your network provider supports CLIP, CLI.
 - CLI (Calling Line Identification): number of the caller is transmitted
 - CLIP (Calling Line Identification Presentation): number of the caller is indicated
- ◆ You have arranged CLIP with your network provider.
- ◆ The caller has arranged CLI with the network provider.

Call display with CLIP/CLI

If the number of the caller is stored in your directory, you will see their name.



- 1 Ring symbol
2 Number or name of caller

The following is displayed in place of the number:



- ◆ **External**, if no number is transmitted.
- ◆ **Withheld**, if the caller has withheld Calling Line Identification (page 15).
- ◆ **Unavailable**, if the caller has not arranged Calling Line Identification.

Handsfree operation

With handsfree operation, instead of holding the handset to your ear you can put it down, e.g. on the table in front of you to allow others to participate in the call.


Activating/deactivating handsfree

Activating while dialling

  Enter the number and press the handsfree key.



- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

Switching between earpiece and handsfree mode

 Press the handsfree key.

During a call and when listening to the answering machine, switch the handsfree on or off.


If you wish to place the handset in the base station during a call:


- ▶ Press and hold the handsfree key  while placing the handset in the base station. If handsfree key  does not light up, press the key again.

How to adjust the volume, see page 49.

Muting

You can deactivate the microphone in your handset during an external call. The other party hears a wait melody.

 Press the control key on the left to mute the handset.

 Press the display key to reactivate the microphone.

Using the directory and lists

The options are:


- ◆ Directory,
- ◆ Call-by-Call list,
- ◆ Email directory,
- ◆ Last number redial list,
- ◆ SMS list,
- ◆ Calls list,
- ◆ Answering machine list.

You can store a maximum of 200 entries in the directory, call-by-call list and email directory (the actual number depends on the size of the individual entries).


You create a personalised directory, email directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 16).

Directory and call-by-call list

In the **directory**, you store numbers and matching names.

- ▶ With the handset in idle status, open the directory by pressing .

In the **call-by-call list**, you can store prefixes of network providers (so-called "call-by-call numbers").

- ▶ Open the call-by-call list using the  key.

Length of entries

Number: max. 32 digits

Name: max. 16 characters

Note:

For quick access to a number from the directory or the call-by-call list (speed dial), you can assign the number to a key (page 47).

Storing a number in the directory

 → New Entry

- ▶ Change multiple line input:

Number:

Enter number

Name:

Enter name.

Annivers.:

Enter anniversary if required (page 17).

- ▶ Save changes.

If your phone is connected to a PABX, please note page 56.

Storing a number in the call-by-call list

 → New Entry

- ▶ Change multiple line input:

Number:



Enter number.

Name:



Enter name.

- ▶ Save changes.

Selecting entries in the directory and call-by-call list

 /  Open directory or call-by-call list.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first characters (max. 10) of the name, scroll to the entry with  if required.

Dialling with the directory/ call-by-call list

 /  →  (select entry)



Press the talk key. The number is dialled.

Managing entries in the directory/ call-by-call lists

 /  →  (select entry)

Viewing an entry

View Press the display key.
The entry is displayed.
Back with **OK**.


Editing an entry

View / Edit Press display keys one after the other.


► Carry out changes and save.

Using other functions

 /  →  (Select entry)
→  (open menu)

The following functions can be selected with :

Display Number

Edit or enhance a stored number. Then dial or call up further functions by pressing .

Edit Entry

Edit a selected entry.

Delete Entry

Delete a selected entry.

VIP Entry (directory only)

Mark a directory entry as **VIP** (Very Important Person) and assign it a particular ringtone. You will now be able to tell VIP calls from the ringtone.

Requirement: Calling Line Identification (page 13).

Record Pattern (directory only)

Speak the name of the selected entry and store as voice pattern (page 17).

Play Pattern (directory only)

Play voice patterns (page 18).

Delete Pattern (directory only)

Delete voice patterns (page 18).

Copy Entry

Send a single entry to a handset (page 16).

Delete List

Delete **all** entries in the directory/call-by-call list.

Copy List

Send complete list to a handset (page 16).





Available Memory

Display the available entries in the directory, call-by-call list (page 15) and email directory (page 18).

Sending the directory/call-by-call list to another handset

Requirements:

- ◆ The sending and receiving handsets must both be registered to the same base station.
- ◆ The other handset and base station can send and receive directory entries.

 /  →  (Select entry)
→  (open menu) → **Copy Entry / Copy List**



Enter the internal number of the receiver handset. You see **Copying entry**.

Yes / No Press the display key.

A successful transfer is confirmed by a message and the confirmation tone at the receiver handset.

Please note:

- ◆ Entries with identical numbers are not overwritten in the receiver handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

Adding a displayed number to the directory

You can add numbers to the directory which are displayed in a list, e.g. the call list or the last number redial list, in an SMS or during a call.

A number will be displayed.




 → **Copy to Directory**


- Complete the entry, see page 15.

During the number transfer from the answering machine list, the message playback is interrupted.

Copying a number from the directory



In many operating situations you can open the directory, e. g. to copy a number. Your handset need not be in idle status.

- Depending on the operating situation, open the directory with  or  or  **Directory**.

 Select an entry (page 15).


Storing anniversaries in the directory

You can store an anniversary for every number in the directory, and specify a time when you will receive a reminder call on the anniversary.

 →  (Select entry; page 15)

View / Edit

Press display keys one after the other.

 Jump to the **Annivers.:** line.

Edit Press the display key.

- Change multiple line input:

Date:

Enter day/month in 4-digits format.

Time:

Enter the hour/minute for the reminder call in 4-digit.

Prompt:



Select the type of signal for the reminder and press **OK**.


- Save changes (page 12).

Note:

Reminder calls require a time stamp. If you select an optical signal, then a time stamp is not required and is automatically set to 00.00.

Deleting anniversaries

 →  (Select entry; page 15)

 Jump to the **Annivers.:** line.

Edit Delete Save

Press display keys one after the other.

Reminder call on an anniversary

A birthday reminder call is signalled on the handset with the selected ring tone.


Silence

Press the display key to stop the reminder call.

Voice dialling

You can dial numbers from the directory by speaking the name. So that your phone "recognises" you, you must record a voice pattern for every name, i.e. say the name loudly to the handset and store it.

You can also set your telephone to announce the name of the caller instead of ringing for an external call, see page 49.

You can store a voice pattern for a **total** of 30 directory entries. Entries assigned with voice patterns are marked with .

Recording voice patterns

Record the voice pattern in quiet surroundings. The handset should be around 25 cm (10 inches) away from you. The voice pattern can be 1.5 seconds long.

Note:

If you use voice dialling predominantly with a handsfree set, then it is beneficial to record the voice pattern via the handsfree set.

Using the directory and lists

→ (Select entry; page 15)

Open menu.

Record Pattern

Select.

OK Press the display key to start the recording.

You will hear a short beep. The display will prompt you accordingly. Speak the name. Repeat the name after being prompted to do so by the display and by a further beep.

Note:

If the memory cannot accommodate a new voice pattern, a message will appear on the display. The phone automatically returns to the directory. Delete a voice pattern and select **Record Pattern** once again.

To **change** a voice pattern, you must delete it (page 18) and re-record it.

Using voice dialling

Press and **hold**.

Speak the name after the beep. If the name corresponds with the recorded voice pattern, it will be repeated and the number will be dialled.

Playing voice patterns

→ (Select entry with)

Open menu.

Play Pattern Select and press **OK**. The voice pattern will be played in handsfree mode.

Press and **hold** (idle status).

Deleting voice patterns

→ (Select entry with)

Open menu.

Delete Pattern

Select and press **OK**.

Press and **hold** (idle status).

The directory entry is retained.

Email directory

You store email addresses in the email directory (for SMS to email).

Saving a new email address

Open the directory.

<E-Mail Directory>

Select and press **OK**.

New Entry Select and press **OK**.

Enter email address (max. 60 characters).

► Storing (page 12).

During entry, you can open the menu with and use the following functions:

Insert '.' / Insert '@'

Insert a dot or @.

Managing email addresses

→ <E-Mail Directory>

→ (Select entry; page 15)

Viewing entries

View Press the display key. The number is displayed.
Back with **OK**.

Editing entries

View Edit Press display keys one after the other.

► Carry out changes and save (page 12).

Using other functions

→ <E-Mail Directory>

→ (Select entry; page 15)

→ (open menu)

As with the directory, (page 16) you can select the following functions with :

Edit Entry

Delete Entry

Delete List

Last number redial list

The last number redial list shows the last ten numbers dialled on the handset (max. 32 digits). If one of the numbers is in the directory, then the corresponding name will be displayed.

Manual last number redial



Press the key **briefly**.



Select entry.



Press the talk key again. The number is dialled.

When displaying a name, you can have the respective phone number displayed by using the display key **View**.

Managing entries in the last number redial list



Press the key **briefly**.



Select entry.



Open menu.

The following functions can be selected with :

Automatic Redial

The number is automatically dialled at regular intervals (at least every 50 seconds) and the handsfree key flashes, "open listening" is activated.

- Participant answers: press the talk key . The function is ended.
- Participant doesn't answer: the call is terminated after approx. 30 seconds. The function is ended after pressing any key or ten unsuccessful attempts.

Display Number (as in the directory page 16)

Copy to Directory

Copy an entry to the directory (page 17).

Delete Entry (as in the directory page 16)

Delete List (as in the directory page 16)

Opening lists with the message key

You can use the Message key to open the following lists:

◆ SMS list

If **several** mailboxes are set up (page 29), several lists are displayed.

◆ Answering machine list

◆ Network mailbox

If your network provider supports this function and the network mailbox is configured for fast access (page 39).

◆ Calls list

An advisory tone sounds as soon as a **new entry** appears on a list. The key flashes. In idle status, the displays shows an icon for the new message.

Icon

New message



... in answering machine list or T-Net box



... in calls list



... in SMS list

The number of new entries is shown beneath the corresponding icon.

Pressing the flashing key will call up the lists that contain the new messages.

Key disappears on opening a list and exiting the menu. If there are more new entries, you can set the message key back to flashing (page 19), e.g. to notify other users of the new entries.

Setting message key to flashing

Requirement: There is at least one new entry remaining in one of the lists.



Open calls list.

Set Message LED

Select and press **OK**.



Press and **hold** (idle status).

Key disappears on opening a list and exiting the menu.

Calls list

Requirement: Calling Line Identification (CLIP, page 13)

The numbers of the last 30 incoming calls are stored. Depending on the **Calls List Type** set, **All Calls** or just **Missed Calls** are stored.

Multiple calls from the same number are stored as follows:

- ◆ **All Calls** stored several times.
- ◆ **Missed Calls** stored once (last call).

The calls list is displayed as follows:

Calls List: 01+02

Number of new entries + number of old, read entries

Setting list type for calls list

 → **Calls List: 01+02** →  → **Calls List Type**

Missed Calls / All Calls

Select and **OK** press (✓ = on).



Press and **hold** (idle status).

The entries in the calls list are retained when you change the list type.

Answering machine list

You can use the **answering machine list** to listen to the messages that are on the answering machine.

The answering machine list is displayed as follows:

Ans M.: 01+02

Number of new messages + number of old, read messages

Opening calls list/answering machine list



Press.

Calls List: / Ans M.: 01+02

Select as required and **OK** press.



Select entry.

The **calls list** displays the last incoming call.

The **answering machine list** displays the last incoming new message. The playback starts.

Once they have been played, new messages are added to the list after the old ones.

List entry

Example of a list entry:

Missed Calls	
New Call	01/02
1234567890	
28.09.04	09:45
Delete	Call

- ◆ List type (in header)
- ◆ Status of entry
 - New Call:** new missed call
 - Old Call:** previously read entry
 - Answ.:** call was accepted (only on list type **All Calls**)
 - AM answ.:** the answering machine accepted the call. A message was left (only on list type **All Calls**)
 - New Msg.:** new message on the answering machine
 - Old Msg.:** previously heard message on the answering machine
- ◆ Entry number
 - 01/02 means, for example, first entry of two entries in total
- ◆ Number or name of caller
 - You can add the number of the caller to the directory (page 17).
- ◆ Date and time of call (if set, page 9)


You have the following options:

- ◆ **Call back the caller** (if the number of the caller was transmitted, page 13)
 - Press the display key **Call**. Callback begins at once. The number is entered in the last number redial list.
- ◆ **Delete entry**
 - Press the display key **Delete**.

Deleting the calls list

Caution! All **old** and **new** entries will be deleted.

 → **Calls List:** →  (Open menu)
→ **Delete Calls List**

 Press and **hold** (idle status).

Note:

Deleting old messages from the answering machine list, see page 35.

Making cost-effective calls

Sign up with a network provider who offers particularly low-cost call rates (call-by-call). You can manage the numbers in the call-by-call list.

Linking call-by-call numbers with one number

You can insert the dialling code of a network provider in front of the number ("linking").



Open Call-by-Call list.



Select entry (call-by-call number).



Press the display key.

Display Number

Select and press **OK**.



Enter number or select number from the directory (page 17).



Press the talk key. Both numbers are dialled.

Automatic network provider code (preselection)

You can specify a call-by-call number (preselection number), which is **automatically** placed in front of numbers according to two lists.

- ◆ The list "**with preselection**" contains the "rule" for dialling code numbers or the first digits of dialling code numbers with which you wish the preselection number to be used.
- ◆ The list "**without preselection**" contains the "exception to the rule".



Example:


You entered 08 for "with preselection". Consequently, all numbers that start with 08 are dialled with preselection. However, if you want, for example, that 081 is still dialled without preselection, enter 081 for "without preselection".

When dialling, after pressing the Talk/ Handsfree key the **first** digits of the dialled number are compared with both lists:

 
- ◆ The preselection number is not inserted in front if the dialled number
 - matches **no** entry in both lists
 - matches an entry in the list "**without preselection**"
- ◆ The preselection number is inserted in front if the first digits of the dialled number match with **only** one entry in the list "**with preselection**".

Storing preselection numbers

 →  → **Base** → **Preselection**
→ **Preselect. No.**

 Enter or edit preselection number (call-by-call number).

► Save changes (page 12).

 Press and **hold** (idle status).

Saving/editing entries in the preselection lists


Each of the two lists can hold 11 entries:


- ◆ 5 entries with up to 6 digits
- ◆ 6 entries with up to 2 digits

Depending on the particular country, the list "**with preselection**" may already contain preset numbers. This means, for example, that all national calls or calls in the mobile phone network will be **auto-matically** linked to the call-by-call number which you have previously stored.

 
 →  → **Base** → **Preselection** → **With Preselect / Without Presel.**

 Select entry.



 **Edit** Press the display key.

 Enter or edit first digits of number.

► Save changes (page 12).

 Press and **hold** (idle status).

Temporarily cancelling preselection

 (press and hold) →  → **Aut Preselect off**

Permanently deactivating preselection

- Delete the preselection number (page 23).

SMS (text messages)

Your unit is supplied pre-prepared for the sending of SMS.

Requirements:

- ◆ Calling Line Identification is enabled for your phone connection.
- ◆ Your network provider supports SMS in the fixed network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider for the sending and receiving of SMS.

Text messages are exchanged between SMS centres that are operated by service providers. You must enter the SMS centre in your unit, through which you wish to send and receive. You can receive SMS from **every** SMS centre that is entered if you have registered with your service provider. Your SMS is sent through the SMS centre that is entered as the send centre (page 30). Only one SMS centre can be the send centre at any one time.

If no SMS Service Centre is entered, the SMS menu only consists of the entry **Settings**. Enter an SMS Service Centre (page 30).

- ◆ Enter the text see page 63.
- ◆ Writing using the predictive text tool EATONI, see page 63.

Rules

- ◆ An SMS can be up to 612 characters long.
- ◆ If there are more than 160 characters or large image data, the SMS is sent as a **linked** SMS (up to eight SMS of 153 characters each).

Please note:

- ◆ Each incoming SMS is signalled by a single ring (ringtone as for external calls). If you accept such an SMS "call" on the first ring, the SMS will be lost. To prevent this ringing, suppress the first ringtone for all external calls (page 50).
- ◆ If your phone is connected to a PABX, please read page 31.
- ◆ To receive text messages you must be registered with your service provider.

Writing/sending an SMS

Writing an SMS



Select **Mailbox 2** as required and press **OK**.



Enter mailbox PIN if necessary and press **OK**.

Write Message

Select and press **OK**.



Writing an SMS.



Press the display key.

Send

Select and press **OK**.

SMS

Select and press **OK**.

Sending an SMS



Select number with area code (even if you are in that area) from the directory or Call-by-Call list or enter directly. For SMS to an SMS mailbox: put the mailbox ID at the **end** of the number.

Note:

If you have assigned the number to a key: press and **hold** the key to copy the number.



Press the display key.

Send


Select and press **OK**.
The SMS is sent.

Notes:

- If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft message list.
- If the memory is full, or if the SMS function on the base is being used by another handset, this cancels the operation. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.

Setting input language


- Requirement: You are writing an SMS (page 24).

 Press the display key.

Select Language

Select and press **OK**.

 Select input language and press **OK**.


 Press the end call key **briefly** to return to the text panel.

The setting of the input language only applies to the current SMS.

Inserting pre-written text or an email address in an SMS


The options are:

- ◆ 15 icons,
- ◆ 10 tones,
- ◆ email addresses from your email directory (page 18).
- Requirement: You are writing an SMS (page 24). The cursor is in the correct position.

 Press the display key.

Predef. Picture / Predef. Sound / Insert E-mail Adr.

Select and press **OK**.



 Select a language and press **OK**.

The selected object is inserted.

SMS status report

If you have activated the status report, you will receive a message with a confirmation text after you have sent your SMS.

Activating/deactivating the status report


 →  → **Settings**

Status Report

Select and press **OK** (✓ = on).

Reading/deleting a status report

- Opening the incoming message list (page 27) and then:

 Select SMS with the status **State OK** or **State not OK**.

Read Press the display key.

Or:


Delete Press the display key. The text message is deleted.

Draft message list

In the draft message list, you can save, edit later and send an SMS.

Saving an SMS in the draft message list

- You are writing an SMS (page 24).

 Press the display key.

Save Entry Select and press **OK**.

Opening the draft message list

 →  → (Mailbox, mailbox PIN)
→ **Outgoing**

The first list entry is displayed, e.g.:

Saved	01/02
1234567890	
28.09.04	09:45

01/02: Number/total number of SMS

SMS (text messages)

Reading or deleting individual SMS

- Opening the draft message list



Select SMS.

Read

Press the display key. The entry will be displayed. Scroll line by line using

Or:

Delete

Press the display key. The text message is deleted.

Writing/editing an SMS

- You are reading an SMS in the draft message list.



Open menu.

You can select the following:

Write Message

Write and then send an new SMS (page 24) or save.

Use Text

Edit the text of the saved SMS and then send (page 24).

Character Set

Text is shown in the selected character set.

Deleting draft message list

- Open the draft message list and then:



Open menu.

Delete all

Select, press **OK** and confirm with **Yes**. The list is cleared.



Press and **hold** (idle status).

Sending an SMS to an email address

If your service provider supports the 'SMS to email' service, then you can also send your text messages to email addresses.

The email address must be written at the beginning of the text. You must send the SMS to the email service of your SMS send centre.



→ → (Mailbox, mailbox PIN)
→ **Write Message**

E-Mail /

Copy the email address from the email directory or enter directly. End with a space or colon (depending on the service provider).



Enter the SMS text.



Press the display key.

Send

Select and press **OK**.

E-mail

Select and press **OK**. If the number of the email service is not entered (page 30), enter the number of the email service.



Press the display key.

Send

Select and press **OK**.

Sending an SMS as a fax

You can also send an SMS to a fax machine.

Requirement: Your service provider supports this feature.

- You are writing an SMS (page 24).



Press the display key.

Send

Select and press **OK**.

Fax

Select and press **OK**.



Select number from the directory or enter directly. Enter the number with area code (even if you are in the area).



Press the display key.

Send

Select and press **OK**.

Receiving an SMS

All SMS received are saved in the incoming message list. Linked text messages are displayed as **one** SMS. If this is too long or has not been transferred completely, it will be split into individual messages. Since an SMS remains in the list after you have read it, you should **delete SMS regularly from the list**.



The display tells you if the message memory is full.

- ▶ Deleting SMS you no longer require (page 27).

Incoming message list

The incoming message list contains:

- ◆ all SMS received, starting with the most recent.
- ◆ messages that could not be sent despite several attempts.

New SMS are signalled on all Gigaset S44 handsets by the  icon on the display, the flashing message key  and an advisory tone.

Opening the incoming message list with the key

Requirement: There is a **new** SMS in the list.

 Press.

Select mailbox if necessary and enter mailbox PIN.

The incoming message list is displayed as follows (example):

SMS: 01+05	1
	2

- 1 Number of new + number of old, read entries
- 2 Name of mailbox, here: general mailbox

An entry in the list is displayed e.g. as follows:

New	01/02
1234567890	
28.09.04	09:45

01/02: Total number of new SMS/number of the SMS displayed

Opening the incoming message list via the SMS menu

 →  → (Mailbox, mailbox PIN)
→ Incoming 01+05

Reading or deleting individual SMS

- ▶ Open the incoming message list
- ▶ Continue as described at "Reading or deleting individual SMS", page 26.

A new message which you have read acquires the status **Old**.

Deleting incoming message list

All **new and old** SMS in the list are deleted.


- ▶ Open the incoming message list

 Open menu.

- ▶ To continue, see "Deleting draft message list", page 26.

Replying to or forwarding SMS

- ▶ Reading an SMS (page 27):

 Press the display key.

You have the following options:

Reply

Write and send a reply SMS directly (page 24).

Answer: Yes / Answer: No

Yes or **no** is added to the SMS. Then send the SMS (page 24).


Use Text

Edit the text in the SMS and then send it (page 24). Attachments (e.g. pictures, melodies) are not sent.

SMS (text messages)

Forwarding an SMS

- ▶ You are reading an SMS (page 27):

 Press the display key.

Forward Select and press **OK**. Next see page 24.


Attachments are forwarded. If a service provider does not permit the forwarding of attachments:

- ▶ Select **Use Text**, to forward the SMS without attachments.
- ▶ Confirm the prompt **New SMS will not contain picture/ melody. Continue?** with **Yes**.

Adding a number to the directory

Adding the sender's number

- ▶ Open incoming message list and select entry (page 27).

 Press the display key. To continue, see page 17.


Notes:

- You can create a special directory for SMS within your directory by putting an star (*) before the names.
- An attached mail box identifier is added to the directory.


Copying/selecting numbers from a SMS text

- ▶ Read SMS (page 27) and scroll to the telephone number.

The digits are reverse-highlighted.

 Press the display key. Continue see page 17.

Or:


 Press the talk key to dial the number.

If you wish to use the number to send an SMS:

- ▶ Save the number with the area code (dialling code) in the directory.

Changing the character set

- ▶ Read the SMS (page 27):

 Press the display key.

Character Set

Text is shown in the selected character set.

Using attachment data

An attachment is reverse-highlighted in the SMS. An SMS can contain multiple attachments.

Listening to and saving a melody

You can save approx. 5 melodies in "iMelody" format and install them as ringtones (page 49). The melodies are stored in the Sound Manager.

You can also save and install these melodies on other handsets registered to the same base station.


You can find a range of melodies on the Internet at www.siemens.com/gigasets445. The Internet pages will tell you which data is available in your country.


Listening to a melody


- ▶ Read the SMS (page 27) and move the cursor to the line in which the attachment can be found. The melody is played back immediately.

Saving a melody

- ▶ Open the SMS to read it (page 27).
- ▶ Listen to the melody.

 Press the display key.

 If necessary, change the name of the melody.

 Press the display key.

Melodies are saved in the Sound Manager (page 50).

Notification by SMS

You can be notified by SMS about missed calls or new messages on the answering machine.

Requirement: For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another phone with SMS functionality.

You only need to set the phone number to which notification should be sent (notification number) and the notification type.

Storing the notification number



→ → **Settings** → **Notify Number**



Enter the number to which the SMS should be sent.



Press the display key.

Save Entry Select and press **OK**.



Press and **hold** (idle status).

Caution:

Do **not** enter your own fixed network number for the notification of missed calls. This can lead to chargeable endless looping.

Setting the notification type



→ → **Settings** → **Notify Type**

► Change multiple line input if necessary:

Missed Calls:

Set **On**, if you want SMS notification.

Ans Machine:

Set **On**, if you want SMS notification.

► Save changes (page 12).

SMS mailboxes

The **General Mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can also set up three **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "Mailbox ID" (a kind of extension number).

Please note:

- ◆ If you operate a number of devices (base stations) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0").
- ◆ You can only use personal mailboxes if your service provider supports such a function. You can tell that this is supported by the fact that a star (*) is added to the number of a (preset) SMS centre.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring the base station's factory settings. This will **delete all messages from all mailboxes**.

Setting up and changing a personal mailbox

Setting up a personal mailbox



→ → **Settings** → **SMS Mailboxes**



Select mailbox, e.g. **Mailbox 2** and press **OK**.

► Change multiple line input:

On/Off:

Activate or deactivate mailbox.

ID:

Select mailbox ID (0–9). You can only select the available numbers.

Protection:


Activate/deactivate PIN protection.

PIN

Enter 4-digit PIN, if necessary.

► Save changes (page 12).

SMS (text messages)

Active mailboxes are marked with ✓ in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

Deactivating a mailbox

- ▶ Set **On/Off**: to **Off**. Confirm message with **Yes** if necessary.

All SMS saved in this mailbox will be deleted.


 
Deactivating PIN protection

- ▶ Set **Protection**: to **Off**.





The mailbox PIN is reset to "0000".

Changing the name of a mailbox

-  →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)

- Edit** Press the display key.
-  Enter new name.
- Save** Press the display key.
-  Press and **hold** (idle status).

Changing a mailbox's PIN and ID

-  →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)
-  Enter mailbox PIN if necessary und press **OK**.
- ▶ Set **ID**:, **Protection**: and **PIN** (page 29).

Sending a text message to a personal mailbox

To send a text message to a personal mailbox, the sender must know your ID and enter it after your number.

- ▶ You can send your SMS contact an SMS via your personal mailbox.


Your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

Setting SMS centre

Entering/changing SMS centres

- ▶ You should find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → **Settings** → **Service Centres**

 Select an SMS centre (e.g. **Service Centr. 1**) and press **OK**.

- ▶ Change multiple line input:

Active Send:

Select **Yes**, if SMS should be sent via the SMS centre.

SMS:

Press the display key **Edit**. Enter the number of the SMS service and add a star, if your service provider supports personal mailboxes.

E-mail:

Press the display key **Edit**. Enter the number of the email service.

- ▶ Save changes (page 12).

Note:

Ask your service provider for details of how you should enter service numbers if you wish to use personal mailboxes (requirement: your service provider supports this function).

Sending an SMS through another SMS centre

- ▶ Activate the SMS centre (2 to 5) as **send centre**.
- ▶ Send the SMS.

SMS info services

You can have your service provider send you specific information by SMS (e.g. weather forecast or the lottery numbers). Up to 10 info services can be stored. You can obtain information about the info services available and their costs from your service provider.

Setting up/ordering an info service

Ordering an info service



→ SMS Service



Select info service.

Send

Press the display key.

Note:

You can also open the menu for ordering an info service via → .

Setting up an info service

► Select info service (see above). Now:

View

Press the display key.

Edit

Press the display key.



If necessary, enter code, designation and destination number.

Save

Press the display key.

Changing the entry of an info service

► Select info service (see above). Now:

View

Press the display key.

Edit

Press the display key.



If necessary, change code, designation or destination number.

Save

Press the display key.

Deleting an info service

► Select info service (see above). Now:



Open menu.

Delete Entry Select and press **OK**.

SMS to a PABX

- ◆ You can only receive an SMS when the **Calling Line Identification is forwarded to the extension of the PABX (CLIP)**. The CLIP of the phone number for the SMS centre is evaluated in your **Gigaset**.
- ◆ If required, you must prefix the number for the SMS centre with the access code (depending on your PABX). You can store the access code in your base station.
- If in doubt, test your PABX by e.g. sending an SMS to your own number: once with access code and once without.
- ◆ When you send SMS, your sender number may be sent without your extension number. The recipient cannot reply to you directly in this case.

SMS can only be sent and received **through ISDN exchanges** with the MSN number assigned to your base.

Activating/deactivating the SMS function

When you switch off you cannot send or receive any SMS with your phone.

The settings which you have made for sending and receiving SMS (e.g. the call numbers of the SMS centres) and the entries in the incoming and draft message lists are saved when you switch off your phone.



Open menu.

5

4

9

2

6

Enter the digits.

0 +

OK

Deactivate the SMS function.

Or:

1

OK

Activate SMS function (default settings).

SMS troubleshooting

Errors when sending

EO	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
FE	Error occurred during SMS transfer.
FD	Connection to SMS centre failed, see self-help.

Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

You cannot send messages.	
1.	You have not requested the CLIP service (Calling Line Identification Presentation). <ul style="list-style-type: none">▶ Ask your service provider to enable this service.
2.	SMS transfer was interrupted (e.g. by a call). <ul style="list-style-type: none">▶ Re-send the SMS.
3.	Feature is not supported by network provider. .
4.	No number or an invalid number is entered for the SMS centre activated as the send centre. <ul style="list-style-type: none">▶ Enter the number (page 30).
You receive an SMS whose text is incomplete.	
1.	Your phone's memory is full. <ul style="list-style-type: none">▶ Delete old messages (page 27).
2.	The provider has not yet sent the rest of the message.
You have stopped receiving messages.	
1.	You have changed the ID of your mailbox. <ul style="list-style-type: none">▶ Tell your SMS contacts your new ID or undo the change (page 30).
2.	You have not activated your mailbox. <ul style="list-style-type: none">▶ Activate your mailbox (page 30).
3.	Call diversion is activated with When: All Calls or the call diversion All Calls is activated for the network mailbox. <ul style="list-style-type: none">▶ Change your call diversion.

The message is played back.

1. The "display call number" service is not activated.
 - ▶ Have your service provider enable this service (there is a charge for this).
2. Mobile phone operator and network SMS service provider have not agreed on a cooperation.
 - ▶ Obtain information from your network SMS service provider.
3. Your terminal is recorded in the records of your SMS provider as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
 - Register the terminal (again) for SMS reception.

Messages are only received during the day.

1. Your terminal is stored in the database of your SMS provider as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
 - ▶ Register the terminal (again) for SMS reception (see above).

Operating the answering machine


You can operate the answering machine that is integrated in the base station via the handset, via the keypad of the base station (page 2) or via remote operation (other phone/mobile). You can also listen to messages via remote operation using voice commands (page 38).

Announcement mode

You can use the answering machine in two different modes.



- ◆ In **Ans. & Record** mode, the caller hears the announcement and can then leave a message.
- ◆ In **Announce Only** mode, the caller hears your announcement but cannot leave a message.

Operation via the handset

The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating. You can switch it off with the handsfree key .

Switching answering machine on/off

 →  → **Ans Machine** (✓ = on)

After switching on, the remaining memory time is announced. The  icon is displayed on the screen. The  key lights up on the base station.

The phone is supplied with a pre-recorded announcement for the answer and record mode or announce only mode. If a personal announcement has not been recorded, the corresponding pre-recorded announcement is used.

Recording a personal announcement/announce only



 →  → **Announcements** → **Rec Announce / Rec Anc Only**

OK Press the display key to start the recording.

You hear the ready tone (short tone).

- ▶ Now speak your announcement (at least 3 sec.).

End Press the display key to end the recording.

Cancel the recording with  or . Restart the recording with **OK**.

After recording, the announcement is played back for you to check. You can re-record the announcement with **New**.

Please note:

- ◆ Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.
- ◆ If you cancel the recording, the pre-recorded announcement is then used.
- ◆ The recording is cancelled if the answering machine memory is full.
 - ▶ Delete old messages and repeat recording if required.

Playing back announcements

 →  → **Announcements** → **Play Announce / Play Anc Only**


Record a new announcement while playing back announcement:

New Press the display key.

Deleting announcements

 →  → **Announcements** → **Del Announce / Del Anc Only**



Yes Press the display key to confirm the prompt.

 Press and **hold** (idle status).

After deletion, the corresponding pre-recorded announcement is then used.

Select announcement mode

You can choose between **Ans. & Record** and **Announce Only**.

 →  → **Announcements** → **Set Ans. Mode** → **Ans. & Record / Announce Only**
(✓ = on)



Press and **hold** (idle status).

The selected mode is saved even after the answering machine is deactivated.

If in **Ans. & Record** mode the memory for messages is full, the answering machine switches automatically to the **Announce Only** mode.

► Deleting old messages.

The answering machine **automatically** switches back to the set mode once deletion is complete.

Setting 'answer and record' or 'announce only' by toggling

You can use the **Ans Mode Time** setting to change over the announcement mode for a specific period.

Example: The **Ans. & Record** mode is set. If you activate **Ans Mode Time** and set a period (e.g. 18.00 to 08.00), the answering machine switches to the **Announce Only** mode for this period. Outside this period (08.01 to 17.59), the **Ans. & Record** is active.

 →  → **Announcements** → **Set Ans. Mode** → **Ans Mode Time** (✓ = on)

► Change multiple line input:

From:

Enter hours/minutes for the start of the period in 4-digit format.

Until:

Enter hours/minutes for the end of the period in 4-digit format.

Activation:

Select **On** or **Off**.




► Save changes with **Save**.

As soon as you change the announcement mode (page 34), the function **Ans Mode Time** is automatically deactivated.

Playing back messages

The date and time of each message is logged (provided this has been set, page 9). If Calling Line Identification is activated, then the caller's number is displayed. If the caller's number is stored in the directory, the respective name is displayed.

Playing back new messages

New messages that have not yet been heard are indicated by the  icon in the display and by the  key flashing on the handset. The  key flashes on the base station.



Press the message key.

Ans M.: 01+02

Select as required and press **OK**.

Playback begins with the first new message. After the last new message you hear the end tone.

Playing back old messages


You can listen to old messages if there are no more new messages. Start the playback as described under "Listening to new messages".

After the entry time and date have been played back (after approx. 3 seconds) a new message assumes the status "old".

Stopping and controlling playback

During message playback:



Stop playback. Press  again to resume.



Go to the start of the current message.



To previous message.



To next message.



To next-but-one message.

After an interruption of over one minute, the answering machine returns to idle status.

Marking a message as "new"

A previously played back "old" message is displayed as a "new" message again.

During message playback:




Open menu.

Mark as New

Select and press **OK**.

Playback of the current message is cancelled. Playback of next message starts, if applicable.

The  key on the handset flashes.

Adding the telephone number of a message to the directory

See also "Adding a displayed number to the directory", page 17.

Deleting messages

You can delete old messages either all together or individually.

Deleting all old messages

During playback or pause:



→ **Del All Old Msgs**

Yes

Press the display key to confirm the prompt.

Deleting individual old messages

During playback or pause:

Delete

Press the display key.


Picking up a call from the answering machine

You can pick up a call while the answering machine is recording it or being operated via remote operation:



/ Press talk key or handsfree.

Recording stops and you can speak to the caller.

If 2 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message. The  key on the handset flashes.

You can take the call even if it is not signalled on the handset.

Diverting an external call to the answering machine

You can divert an incoming external call to the answering machine even if it is switched off.

Requirement: sufficient storage space is available on the answering machine.

An external call is signalled on the handset:



Press the display key.

The answering machine starts immediately in recording mode and records the call. The set time for the call acceptance (page 36) is ignored.

Activating/deactivating two-way recording

You can record an **external** call with the answering machine.

- ▶ Inform the caller that the call is being recorded.



Open menu.

Two Way Record

Select and press **OK**.

The two-way recording is indicated on the display by an advisory text and is added to the answering machine list as a new message.

End

Press the display key to stop the two-way recording.

The max. recording time depends on the available memory of the answering machine. If the memory is full, you will hear an end tone and the recording is aborted.

Activating/deactivating listen in

During recording of a message you can listen in via the loudspeaker of the base station and registered handsets.

Permanently activating/deactivating listen in

 →  → **Call Screening** → **Handset / Base**

(√ = on)



Press and **hold** (idle status).

Listen in can be simultaneously activated on the **Base** and **Handset** Gigaset S44.

You can switch off the **Call Screening** function on the handset during the recording.

Switching off listen in for the current recording



Press the end call key.

Setting up the answering machine

The answering machine has already been preset at the factory. However, you can make individual settings using the handset.

Call acceptance/charge saving function for remote operation



You can set when you want the answering machine to accept a call.


The options are: **0 sec.**, after **10 sec.**, **20 sec.** or **30 sec.** and **cost-saving** setting **Auto**

On **Auto** the following applies for call acceptance:

- ◆ If no new messages are present, the answering machine accepts a call after **20 seconds**.
- ◆ If new messages are present, the answering machine accepts a call after **10 Seconds**.

When operating remotely you then know after approx. 15 seconds that there are no new messages (otherwise the answering machine would already accepted your call). There will be no call charges if you hang up now.

 →  → **Ring Delay**

Select  **0 sec. / 10 sec. / 20 sec. / 30 sec. / Auto.**

Save

Press the display key.



Press and **hold** (idle status).

Please note:

You can set your phone so that on all calls the **first** ringtone is **supressed** (page 50). Therefore, the time set for the call acceptance does not indicate how long the phone rings before the answering machine accepts the call.

Setting the recording time

You can set the maximum recording time of a message. The options are: **30**, **60**, **120** seconds or **Maximum**.

 →  → **Message Length**

Select and press **OK**.



Select recording time.

Save

Press the display key.

Changing language for voice prompt and pre-recorded announcement

Enter the digits.

  **OK**

Set English.

  **OK**



Set French.

  **OK**

Set Arabian.

Resetting fast access on the answering machine

The integrated answering machine is factory-set for fast access. However, if you have set the T-Net box for fast access (page 39), you can reset this setting.

 →  → **Set Key 1**

Answer Machine / Network Mailb.

Select and press **OK**.



Press and **hold** (idle status).

After you have selected the T-Net box or the answering machine, press and **hold** key **1**. You will be connected directly.

The setting for fast access applies to all registered handsets.

Operating when on the move (remote operation)

You can check and activate your answering machine from any other telephone (hotel, pay phone, etc.).

Requirements:

- ◆ You have set a system PIN other than 0000 (page 54).
- ◆ The phone you are using for remote operation has tone dialling (DTMF), i.e. you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from your mobile phone retailer).

Calling the answering machine and playing back messages



Dial your own number.



While you listen to your announcement, press **2** key and enter the system PIN.

You will be informed whether any new messages have been recorded. The messages are now played back. You can now operate the answering machine via the keypad or by voice prompts.

Operating the answering machine via the keypad

The following keys are used for operation:



Go to the start of the current message. Press repeatedly to go to the previous messages.



Stop playback. Press again to resume.



Go to the next message. Press repeatedly to go to the next messages.



Mark message as "new".



Delete current message.

Number codes for operation:



Previous



Stop/cont.



Next



Begin



New



 
Delete




Operating the answering machine

Operating the answering machine with voice prompts

You can control message playback using the voice commands **"BACK"** und **"FORWARD"**. You can delete individual messages during playback using the voice command **"DELETE"**.

- ▶ Before each voice command, press  and then speak the command when you hear the ready tone.

When deleting a message you are prompted to repeat the command.

- ▶ **Repeat "DELETE"**, without first pressing the .

Activating the answering machine

- ▶ Phone home and allow to ring for around a minute.

You hear: "Please enter PIN".



Enter system PIN.

Your answering machine is activated. It tells you how much memory time is left.

The messages are now played back.

The answering machine cannot be deactivated remotely.

Using T-Net box



The T-Net box is the answering machine in your network provider's network. You cannot use the T-Net box unless you have **applied** to your network provider.

Configuring T-Net box for fast access

With fast access you can direct dial either the T-Net box or the integrated answering machine.

The integrated answering machine is pre-configured for fast access. However, you can configure the T-Net box instead. Ask your network provider about this.

Configuring T-Net box for fast access and entering the T-Net box number

 →  → **Set Key 1**

Network Mailb.

Select and press **OK** (✓ = on).



Enter T-Net box number.



Press the display key.

Save Entry Select and press **OK**. The entry is stored.



Press and **hold** (idle status).


This setting is now valid for all registered handsets.

Calling T-Net box



Press and **hold**. This connects you directly to T-Net box.



Press handsfree key  if required. You hear the T-Net box announcement.

Viewing a message from T-Net box

When a message arrives for you, you get a call from T-Net box. If you have requested Calling Line Identification, the display shows the T-Net box number. If you accept the call, the new messages are played back. If you do not accept the call, the T-Net box number will be stored in the list of missed calls and the message key flashes (page 19).

Using several handsets

Registering handsets

You can register up to a total of six handsets on your base station.

A Gigaset S44 handset can be registered on up to four base stations.

Automatic registration Gigaset S44 to Gigaset S445

Important: The handset must not already be registered to any base station.

Registration of the handset to the Gigaset S445 base station occurs automatically.

- ▶ Place the handset in the base station with its **display facing forward**.

Registration takes around 1 minute. During this process **Regstr.Procedure** appears in the display and the name of the base station flashes e.g. **Base 1**. When the handset has registered, its screen displays its internal number, e.g. **INT 2** for internal number 2. The handset is assigned the lowest available internal number (1-6). If all internal numbers 1-6 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status.

Notes:

- Automatic registration is not possible when the base station on which you wish to register the handset is being used to make a call.
- Press any key to cancel automatic registration.
- If automatic registration does not work, you will have to register the handset manually.
- You can change the name of the handset (page 43).

Manual registration Gigaset S44 to Gigaset S445

You must activate manual registration of the handset at both the handset and the base station.

After it has registered, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**. If it does not, repeat the procedure.

On the handset



Handset → Register H/Set



Select base station, e.g. **Base 1** and press **OK**.



Enter the system PIN of the base station (the default is 0000) and press **OK**. The screen will display, e.g. **Base 1**.

On the base station



Within 60 secs. press and **hold** the registration/paging key on the base station (approx. 3 secs.).

Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

On the handset

- ▶ Start to register the handset as described in its user guide.

On the base station



Press and **hold** the registration/paging key on the base station (approx. 3 secs.).

De-registering handsets

You can de-register any registered handset from any registered Gigaset S44 handset.



Open list of internal users.
The handset you are currently using is indicated by <.



Select the internal user you wish to de-register.



Open menu.

De-reg. H/Set No.

Select and press **OK**.



Enter current System PIN and press **OK**.

Yes

Press the display key.

Locating a handset ("Paging")

You can locate your handset using the base station.

- ▶ **Briefly** press the registration/paging key on the base station.
- ▶ All handsets will ring at the same time ("Paging"), even if the ringers are switched off.

Ending paging



Briefly press the registration/paging key on the base station or the talk key on the handset.

Changing the base station

If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (**Best Base**).



→ → **Handset** → **Select Base**



Select one of the registered base stations or **Best Base** and press **OK**.

Changing the name of the base station

Names "Base 1" to "Base 4" are assigned automatically. The name of the base station is handset-specific, i.e. the base station receives the name which was assigned by the handset. The same base station can have different names on different handsets. You can change the name of your base station.



→ **Handset** → **Select Base**



Select base station and press **Edit**.



Enter new name, max. of 16 characters (page 63).

Save

Press the display key to save the setting.



Press and **hold** (idle status).

Making internal calls

Internal calls to other handsets registered on the same base station are free.

Calling a specific handset



Initiate internal call.



Enter the number of the handset.

Or:



Initiate internal call.



Select handset.



Press the talk key.

Calling all handsets ("group call")



Initiate internal call.



Press the star key. All handsets are called.

Ending calls



Press the end call key.

Transferring a call to another handset

You can transfer an external call to another handset (connect).



Open list of handsets.
The external caller hears the hold music.



Select a handset or **Call All** and press **OK**.

When the internal participant answers:


► If necessary announce the external call.



Press the end call key.

The external call is transferred to the other handset.

If the internal participant does **not** answer or is busy, press the display key **End**, to return to the external call.

When diverting a call you can also press the end call key  before the internal participant lifts the receiver.

Then, if the internal participant does not answer or is busy, the call will automatically return to you (the display will show **Recall**).

Internal consultation calls

When you are speaking to an **external** participant you can simultaneously call an **internal** participant for consultation.



Open list of handsets.
The external caller hears the hold music.



Select handset and press **OK**.

Ending an enquiry call



Press the display key.

You are reconnected with the external caller.

Accepting/rejecting call waiting

If you get an **external** call while conducting an **internal** call, you will hear the call waiting tone (short tone). The caller's number will appear in the display if phone number identification is enabled.

Ending an internal call, accepting an external call

Accept Press the display key.

The internal call is **ended**. You are connected to the external caller.

Rejecting external call

Reject Press the display key.

The call waiting tone is turned off. You remain connected with the internal participant. The ringtone can still be heard at other registered handsets.

Linking internal participants to an external call

Important: The **Listening In** function must be activated.

You are conducting an external call. An internal party can join this call and take part in the conversation. All the parties are made aware of the 'join-in' by a signal tone.

Activating/deactivating internal join-in



→  → **Base** → **Add. Features**
→ **Listening In**



Press and **hold** (idle status).

Internal join-in

The line is engaged with an external call. The screen will display information to that effect. You would like to join-in on the existing external call.



Press and **hold** the talk key.


You are linked into the call. All parties hear a signal tone. During this time, this handset will not display any information and no selection can be made from this handset.

Ending join-in



Press the end call key.

All parties hear a signal tone.

If the **first** internal participant presses the end call key , the handset that is 'joined-in' remains connected to the external participant.

Changing the name of a handset

The names "INT 1", "INT 2" etc. are assigned automatically at registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.



Open list of handsets. Your own handset is indicated by <.



Select handset.



Press the display key.



Enter name.



Press the display key.

Changing a handset's internal number

A handset is **automatically** assigned the lowest unassigned number when it is registered. If all the numbers have been assigned, number 6 is overwritten, provided the handset is in idle status. You can change the internal number of all registered handsets (1-6).



Open list of handsets. Your own handset is indicated by <.



Open menu.

Edit H/Set No.

Select and press **OK**. The list of handsets is displayed.



The current number flashes. Select a handset.



Enter the new internal number(1-6). The handset's old number is overwritten.



Press the display key to save the input.



Press and **hold** (idle status).

You will hear the error tone (descending tone sequence) if you assign an internal number twice.

- Repeat the process with an unused number.

Using a handset as a room monitor

If the room monitor is activated, a previously stored destination number is called as soon as a set noise level is reached. You can store an internal or external number in your handset as the destination number.

The room monitor call to an external number stops after approx. 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). While the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

If you switch off the handset, the room monitor mode is deactivated. You must reactivate the function after switching on the handset again.

Caution!

- You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.
- The active room monitor function considerably reduces the operating time of the handset. Place the handset in the charging cradle if necessary. This ensures that the battery does not run down.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

Activating the room monitor and entering the number to be called

 →  → Room Monitor

- ▶ Change multiple line input:


Room M.:

Select **On** to activate.

Call to:

Press the display key **Edit** and enter destination number.

External number: select number from the directory or enter directly. Only **the last 4 digits** are displayed.


Internal number: **INT**  (Select handset or **Call All** if all registered handsets are to be called) **OK**.

Store number with  **Save Entry OK**.

Level:

Set noise level sensitivity (**Low** or **High**).

- ▶ Save changes (page 12).

The function is now activated. With , you can move directly to settings.

Changing previously set external destination number

 →  → Room Monitor



Jump to the **Call to:** line.

Edit

Press the display key.



Delete existing number.

- ▶ Enter number as described in "Activating the room monitor and entering the number to be called" (page 44).
- ▶ Save changes (page 12).

Changing previously set internal destination number



Room Monitor



Jump to the **Call to:** line.



Press the display key.



Press the display key to confirm the prompt.

- ▶ Enter number as described in "Activating the room monitor and entering the number to be called" (page 44).
- ▶ Save changes (page 12).

Deactivating the room monitor remotely

Important: The phone must support touch tone dialling and the room monitor should be set for an external destination number.

- ▶ Take the call from the room monitor and press keys .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings on the handset (e.g. no ringtone) will however remain activated until you press the display key **Off** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save** (page 44).

Setting the Walk and Talk mode

The Walk and Talk function allows two handsets to communicate with each other no matter how far they are from the base station.

Example: You go on holiday and take two handsets with Walk and Talk functionality with you. Set the Walk and Talk function on both handsets.

Important:

One of the following requirements must be met.

- ◆ Both handsets are registered to the same base station.
- ◆ Both handsets are registered to different base stations and both are set to **Best Base** (page 41).
- ◆ One of the handsets is not registered to any base station and the registered handset is set to **Best Base**.
- ◆ Neither handset is registered to a base station.

Please note:

- ◆ In Walk and Talk mode, the range between the handsets is a maximum of 300 m in the open.
- ◆ The handsets can no longer be reached by incoming calls.
- ◆ The Walk and Talk mode severely reduces the handset operating times.
- ◆ The Walk and Talk mode is retained even when you switch your handset off and back on.

Activating Walk and Talk mode



Walky-Talky

If, when you are in Walk and Talk mode, you press the talk key or handsfree key , the call will go to all the handsets that are in Walk and Talk mode. The connection is made with the first handset to answer the Walk and Talk call.

- ◆ The loudspeaker volume and advisory tones are set in exactly the same way as if your handsets were in range of the base station (page 49).
- ◆ "Activate/deactivate ringtone" (page 50) and "Activate/deactivate keypad lock" (page 9) are available in Walk and Talk mode.
- ◆ To open the menu, press the display key .

Deactivating Walk and Talk mode

OFF Press the display key.

Using a handset in Walk and Talk mode as a room monitor


This function allows you to use the Walk and Talk mode as a room monitor. The room monitor will then call all handsets that are in Walk and Talk mode as soon as the previously set noise level has been reached.

During the call, all keys are locked except the end call key. The room monitor function **remains active** after you end the call. It must be activated again if the handset has been switched off.

Caution!

- You should always check the operation of the room monitor before use. For example, test the sensitivity and connection.
- The active room monitor function considerably reduces the operating time of the handset. Place the handset in the charging cradle if necessary. This ensures that the battery does not run down.
- The handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- Please note that the Walk and Talk function's room monitor does not provide full security.

Activating/deactivating the room monitor

 Press the display key.

Room Monitor

Select and press **OK**.

Room M.:

Select **On** to activate. Select **Off** to deactivate.

Level:

Set the noise sensitivity at the desired level (**Low** or **High**).

► Save changes.

The room monitor has now been activated/deactivated.

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Shortcuts for functions and numbers

You can assign the left display key and the digit keys **0+** and **2** to **9** each with a number or a function.

The number is then dialled or the function started by simply pressing a key.

Assigning a digit key/left display key

Requirement: The digit key or the left display key has not yet been assigned a number or a function.

- ▶ Press the display key **?** or press and **hold** the digit key.

The list of possible key assignments is opened. The following can be selected:

Quick Dial / Call-by-Call

Assign key with a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

- ▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/display key.

Info Services

Assign key with the menu for ordering info services (page 31).

 → **SMS Service**

SMS Notific.

Assign key with the menu for activating SMS notification (page 29):

 → **Settings** → **Notify Type**

Room Monitor

Assign key with the menu for setting and activating the room monitor (page 44):

 → **Room Monitor**

Answer M. Mode

Assign key with the menu for selecting the answering machine mode (page 34):

 → **Announcements** → **Set Ans. Mode**

Set Appoints. / Alarm Clock

Assign key with the menu for setting and activating an appointment/the alarm clock (page 52):

 → **Set Appoints. / Alarm Clock**

If the left display key has been assigned a shortcut, the selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line.

Starting the function, dialling the number

If the handset is in idle status, press and **hold** the digit key or press the display key **briefly**.

Depending on the key assignment:

- ◆ Numbers are dialled directly.
- ◆ Function menu is opened.

Changing key assignment

Display key

- ▶ Press and **hold** the left display key.

The list of possible key assignments is opened.

- ▶ Proceed as is described when first assigning the key with a shortcut (page 47).

Digit key

- ▶ Press and **hold** digit key.

Change Press the display key. The list of possible key assignments is displayed.

Handset settings


- ▶ Proceed as is described when first assigning the key with a shortcut (page 47).

Changing the display language

You can view the display texts in different languages.


 
 
 
 →  → **Handset** → **Language**


The current language is indicated by ✓.

 Select a language and press **OK**.

 Press and **hold** (idle status).


 
If you accidentally choose a language you do not understand:

    Press keys one after the other.

 Select the correct language and press **OK**.


Setting the display

You have a choice of four colour schemes and several different contrasts.

 →  → **Display**

Colour Scheme


Select and press **OK**.

 Select a colour scheme and press **OK** (✓ = current colour).

 Press **briefly**.

Contrast Select and press **OK**.

 Select contrast.

 Press the display key.

 Press and **hold** (idle status).

Setting screen picture

You can display a screen picture when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screen picture is now displayed in certain situations, e.g. during a call or when the handset has been deregistered.

If a screen picture has been activated, the menu item **Screen Picture** is marked with ✓.

 →  → **Display** → **Screen Picture**

The current setting is displayed.

- ▶ Change multiple line input:

Activation:

Select **On** (screen picture is displayed) or **Off** (no screen picture).

Picture:


Change screen picture if necessary (see below).


- ▶ Save changes.

If the screen picture conceals the display, press any key **briefly** to show the idle display with time and date.

Changing screen picture

 →  → **Display** → **Screen Picture**

 Jump to the line **Picture**:


 
 Press the display key. The active screen picture is displayed

 Select picture and press **OK**.

- ▶ Save changes.

Setting night mode

 
If the handset is in the charging cradle, the display is dimmed. If this bothers you, you can set the handset to night mode. The display is then completely dark when that handset is in the charging cradle.



 →  → **Display**

Night Mode Select and press **OK** (✓ = on).

 Press and **hold** (idle status).

Activating/deactivating auto answer

If you have activated this function, when you get a call you can simply lift the handset out of the charging cradle without having to press the talk key .

 →  → **Handset**

Auto Answer

Select and press **OK** (✓ = on).



Press and **hold** (idle status).

Adjusting the loudspeaker volume

You can set the loudspeaker volume for handsfree speaking to five different levels and the earpiece volume to three different levels. You can only make these adjustments during an external call.

The handsfree volume can only be adjusted when this function is set.

You are conducting an external call.




Open menu.



Select volume.



Press display key if necessary to save the setting permanently.

If  is assigned a different function, e.g. when toggling (page 17):




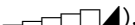
Open menu.

Volume Select and press **OK**.

Configure setting (see above).

Changing ringtones

◆ Volume:

You can choose between five volumes (1–5; e.g. volume 2 = ) and the "Crescendo" ring (6; volume increases with each ring = .

◆ Ringtones:

You can select any sound from the Sound Manager (page 50).

You can configure the following functions with different ringtones:

- ◆ **Ext. Calls:** For external calls
- ◆ **Internal Calls:** For internal calls
- ◆ **Appointments:** For set appointments (page 52)
- ◆ **Alarm:** For a pre-set wake-up call (page 52)
- ◆ **All:** The same for all functions

How to set the ringtones for the base station, see page 54.

Settings for individual functions

Set the volume and melody depending on the type of ringing. For external calls, you can choose to have the name of the caller announced. This requires the corresponding voice pattern to be recorded beforehand (page 17).

 →  → **Ringer Settings**



Select setting, e.g. **Ext. Calls**, and press **OK**.



Set volume (1–6).



Jump to the next line.




Select melody.



Activate or deactivate **Announce Requirement**: Calling Line Identification (page 15)

► Save changes (page 12).

In idle status, you can also open the menu **Ringer Settings** by pressing  briefly.

Same settings for all functions

 →  → **Ringer Settings** → **All**

► Set volume and ringtone (see "Settings for individual functions").

 
Yes Press the display key to confirm the prompt.


 Press and **hold** (idle status).

Activating/deactivating the ringtone

You can deactivate the ringer on your handset before you answer a call or when the handset is in idle status; the ringer can be deactivated permanently or just for the current call. The ringtone cannot be re-activated while an external call is in progress.

Deactivating the ringtone permanently

 Press the star key and hold until you can no longer hear the ringtone.

The  icon appears in the display.

Re-activating the ringtone

 
 Press and **hold** the star key.


Deactivating the ringtone for the current call

Silence Press the display key.


Activating/deactivating the alert tone






Instead of a ringtone, you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringtone.

 Press and **hold** the star key and **within 3 seconds**:

Beep on Press the display key. A call is now signalled by **one** brief alert tone. You will now see  in the display.

Activating/deactivating first ring muting

 Open menu.

Press keys.





 **OK** First ring audible.

 
 
Or:

 **OK** First ring muted.

Sound Manager

The handset's Sound Manager manages ringtones and sounds which you can use as ringtone melodies. It can manage the following sound types:

Icon	Sound	Format
	Ringtones; monophonic	standard
	Polyphonic	standard
	Polyphonic	.psf
	Monophonic	iMelody

The icon is displayed in front of the name in the Sound Manager. Your phone has 3  and 17  as default settings. You can neither delete nor rename these default sounds.


You can download sounds in .psf- and iMelody format from a PC (page 63). You can have sounds in iMelody format sent to you via SMS (page 28).

In Sound Manager you can listen to the existing sounds and rename and delete sounds that you have downloaded onto your handset via SMS or data cable (max. 16 KB).

Playing back sounds

 →  →  (Select entry)

Play

Press the display key. Sounds are played. Change between entries using the  key.


End

Press the display key. Play back is ended.




Press and **hold** (idle status).

Whilst you are playing sounds, you can adjust the volume using the display key **Volume**.

If you have saved a sound in an invalid data format, you will receive an error message after selecting the entry. The operation is cancelled by pressing . The sound is deleted by pressing **Delete**.

Renaming/deleting sounds

You have selected an entry. If a sound cannot be deleted () , these options are not available.



Open menu.

Depending on the situation, you can select the following functions:

Rename

Select and press **OK**. Change name (max. 16 characters, do not use spaces or special characters) and press **OK**. The entry is saved with its new name.

Delete Entry

The selected entry is deleted.

A deleted ringtone melody is automatically replaced. A deleted ringtone melody for VIP calls or anniversaries is not automatically replaced.

Activating/deactivating advisory tones

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- ◆ **Key beep**: Each key press is acknowledged.
- ◆ **Acknowledge tones**:
 - **Confirmation tone** (ascending tone sequence): at the end of entry/setting and when an SMS or a new entry arrives in the answering machine list or the call list
 - **Error beep** (descending tone sequence): when you make an incorrect entry
 - **Menu end tone**: when scrolling at the end of a menu
- ◆ **Battery low beep**: the battery requires charging.



→  → **Advisory Tones**

► Change multiple line input:

Key Tones:

Select **On** or **Off**.

Confirm.:

Select **On** or **Off**.

Battery:

Select **On**, **Off** or **In Call**. The battery warning tone is activated/deactivated or only sounds during a call.



► Save changes (page 12).

You cannot deactivate the confirmation tone for placing the handset in the base station.

Setting the alarm clock

Requirement: the date and time have already been set (page 9).

Activating/deactivating and setting the alarm clock

 →  → **Alarm Clock**

- ▶ Change multiple line input:

 
Alarm Clock:

Select **On** or **Off**.

Time:

Enter the wake-up time in 4-digit format.

- ▶ Save changes (page 12).

You will see the icon .

A wake-up call with the selected ringtone (page 49) is signalled on the handset. The wake up call sounds for 60 seconds. The display shows **Alarm Clock**.

During a call, the wake-up call is signalled by a short tone.

Deactivating the wake-up call

Requirement: The appointment reminder is ringing.



Silence Press the display key or any key.

Setting an appointment

You can receive reminders for up to 5 appointments from your handset (volume and melody, see page 49).

Saving appointments

Requirement: the date and time have already been set (page 9).

 →  → **Set Appoints.**

The list of stored appointments is displayed. If you have already saved five appointments, then you must delete an existing one.

<New Entry>

Select and press **OK**.

- ▶ Change multiple line input:

Appoint.:

Select **On** or **Off**.

Date:

Enter day/month in 4-digit format.


Time:

Enter hours/minutes in 4-digit format.

Notes:

Press the display key **Edit**. Enter text (max. of 16 characters) and press **OK**. The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If no text is entered, you will see the date and time of the appointment

- ▶ Save changes (page 12).

You will see the icon . The appointment is marked with ✓ in the appointment list. The appointments are sorted according to the date in the list.

An appointment is signalled with the selected ringtone melody (page 49). The appointment reminder sounds for 30 seconds. It will display the entered text or date and time.

During a call, the appointment reminder is signalled by a short tone.

Managing appointments

 →  → **Set Appoints.** → (Appoint.
Select 1–5)

Viewing/editing appointments

View

Press the display key.
The appointment is displayed.
Back with **OK** or:

Edit

Press the display key to change entry if required

- ▶ Make changes.

Using additional menu functions



Open menu.

You have the following options:

Edit Entry

Edit selected appointment.

Delete Entry

Delete selected appointment.

Delete List

Delete **all** appointments.

Switching off or answering an appointment reminder

Requirement: An appointment reminder is sounding.



Press the display key to switch off the appointment reminder.

Or:



Press display key to answer the appointment reminder with an SMS.

Displaying missed appointments, anniversaries

Missed appointments/anniversaries (page 17) are displayed in the list **Missed Dates** if:

- ◆ You don't accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary

The most recent entry is at the start of the list.

If there is a new appointment/anniversary in the list, the display shows **Appoint.**. Pressing the display key will also open the **Missed Dates** list.



Opening the list via the menu:



Missed Dates



Select appointment/anniversary.

This will display information about the appointment/anniversary. A missed appointment is marked with , a missed anniversary with .



Press the display key to delete the appointment/anniversary.

Or:



Press the display key to write an SMS.



Press and **hold** (idle status).

If 10 entries are already stored in the list, the oldest entry will be deleted for the next appointment reminder.

Emergency number

 
The phone is supplied with 112 preset as the emergency number. You can edit or delete the emergency number.

You can dial the emergency number even if the keypad lock is activated.

Editing the emergency number



Handset → Add. Emerg. No

The emergency number is displayed. You **cannot** select the number with  from this menu.



Edit emergency number.



Press the display key.

Save Entry

Select and press **OK**. The entry is stored.

Dialling the emergency number

You can dial the emergency number even when the keypad lock is activated (page 9).



Enter emergency number.



Press the talk key.


Restoring the handset default settings

You can reset any individual settings and changes that you have made. This will not affect entries in the directory, call-by-call list, call list, email directory, SMS lists, the handset's registration to the base station or the content of the Sound Manager. You will find an overview of the default settings in the appendix, page 62.

 →  → **Handset** → **Reset Handset**

Yes Press the display key.

 Press and **hold** (idle status).

Cancel the reset process by pressing  or the display key **No**.

Base station settings

The base station settings are carried out using a registered Gigaset S44 handset.

Protecting against unauthorised access

Protect the system settings of the base station with a PIN known only to yourself. The system PIN must now be entered when, for example, registering/de-registering a handset to/from the base station or when restoring the default settings.

Changing the system PIN


You can change the 4-digit system PIN set on the base station to a 4-digit PIN which is known only to you.


Caution:



Memorise the new system PIN well! If you forget it, the phone will require specialist attention. If this happens, contact the Siemens Hotline (page 60).

Setting a system PIN facilitates remote operation of the answering machine (page 37).

 →  → **Base** → **System PIN**

 Enter current PIN if necessary and press **OK**.

 Enter new system PIN. For security reasons the PIN is shown as four stars (****).

  Jump to the next line, re-enter new system PIN and press **OK**.

 Press and **hold** (idle status).

Changing ringtones

◆ Volume:

You can choose between five volumes and the "Crescendo" ring, see page 49. Select "0" to deactivate the ringtone of the base station.

◆ Ringtones:

You can set a ringtone melody for external calls, see page 49.

 →  → **Base** → **Audio Settings**
→ **Ring Settings**

How to adjust the settings, see page 49.

Repeater support

With a repeater you can increase the range and reception strength of your base station. First you must activate the repeater mode. This would terminate any calls, which are currently running through the base station.

Requirement: A repeater is registered.

 →  → **Base** → **Add. Features**
→ **Repeater Mode**

Yes Press the display key.

When repeater mode is active, the menu item is marked with ✓.

Restoring default settings to base station

When resetting, handsets remain registered. Following settings are not reset:

- ◆ System PIN
- ◆ Setting "First ringtone suppressed"
- ◆ SMS info services

You will find an overview of the default settings in the appendix, page 62.



Base → **Base Reset**



Enter the system PIN and press **OK**.

Yes

Press the display key.

Cancel the restoring process by pressing



or the display key **No**.

Connecting the base station to the PABX

The following settings are only needed when your PABX requires them, please refer to the user guide for your PABX.

You cannot send or receive SMS on PABXs that do not support Calling Line Identification.

Dialling modes and flash time


The current setting is indicated by ✓.

Changing the dialling mode

The following dialling modes can be selected:



- ◆ Tone dialling (DTMF),
- ◆ Pulse dialling (DP).


 →  → **Base** → **Add. Features**
→ **Dialling Mode**

 Select dialling mode (✓ = on) and press **OK**.

 Press and **hold** (idle status).

Setting the flash time



 →  → **Base** → **Add. Features**
→ **Recall**


 Select flash time (✓ = on) and press **OK**.

 Press and **hold** (idle status).

Save access code



Requirement: For your PABX, you must enter an access code where required for external calls, e.g. "0".

 →  → **Base** → **Add. Features**
→ **Access Code**

 Enter or change access code, max. 3 digits.


► Save changes (page 12).

If an access code is saved, the following applies:

- ◆ The access code is automatically put in front of numbers dialled from the following lists: numbers for SMS centres, calls list, answering machine list.
- ◆ You must enter the access code when dialling manually and when entering directory, emergency/direct dial numbers and numbers for SMS centres manually.
- ◆ If, when sending an SMS, you copy the number of the recipient from the directory, you must delete the access code.
- ◆ You can delete an existing access code by pressing **⏮**. Press **⏮**  **Insert** **Pause** **OK** or **⏮**  **Insert Recall** **OK** to insert a pause or a flash.

Setting pauses

Changing pause after line seizure

You can change the length of pause that is inserted between pressing the talk key  and sending the number.



Open menu.



Press keys.



Enter digit for the pause length (1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec) and press **OK**.

Changing the pause after the recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).



Open menu.



Press keys.



Enter a digit for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press **OK**.

Changing a dialling pause (pause after access code)

Requirement: You have saved an access code (page 56).



Open menu.



Press keys.



Enter a digit for the length of the pause (1 = 1 sec.; 2 = 2 sec.; 3 = 3 sec.; 4 = 6 sec.) and press **OK**.

Switching temporarily to tone dialling (DTMF)

If your PABX works with dial pulsing (DP), but you need tone dialling for a call (e.g. to listen to a T-Net box), you must switch to tone dialling for the call.

Requirement: You are conducting a call or have already dialled an external number.



Open menu.

Tone Dialing

Select and press **OK**.

Tone dialling is now activated for this call only.

Appendix

Care

- ▶ Wipe the base station and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset has come into contact with liquid:


1. **Switch the handset off and remove the batteries immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
4. **Do not activate the handset again until it is dry.**

When it has fully dried out you will normally be able to use it again.

 
Questions and answers

If you have any queries about the use of your phone, you can contact us 24/7 at www.siemens.com/gigasetcustomercare. The table below contains a list of common problems and possible solutions.

The display is blank.

1. The handset is not switched on.
 - ▶ Press and **hold** the end call key .
2. The batteries are flat.
 - ▶ Charge or replace the batteries (page 8).

The handset does not respond to a key press.

- The keypad lock is activated.
- ▶ Press and **hold** the hash key  (page 9).

"Base station x" flashes in the display.

1. The handset is outside the range of the base station.
 - ▶ Reduce the distance between handset/ base station.
2. The handset has been de-registered.
 - ▶ Register the handset (page 40).
3. The base station is not switched on.
 - ▶ Check the base station mains adapter (page 7).

Base Search flashes in the display.

The handset is set for **Best Base** and no base station is switched on or within range.

- ▶ Reduce the distance between handset/base station.
- ▶ Check the base station mains adapter (page 7).

Handset does not ring.


1. The ringtone is switched off.
 - ▶ Activate the ringtone (page 50).
2. Call diversion set to **All Calls**.
 - ▶ Switch off Call Diversion (page 15).

You cannot hear a ringtone/dialling tone.

Base station's phone cord has been replaced.

- ▶ When purchasing a new cord, ensure that it has the correct pin connections (page 7).

The other party cannot hear you.

You have pressed the  (INT) key. The handset is "muted".

- ▶ Switch on the microphone again (page 14).

The incoming call number is not displayed although CLIP is set.

Phone number identification is not enabled.

- ▶ **Caller** should ask network provider to activate phone number identification (CLI).

You hear an error tone when keying an input (a descending sequence of tones).

Action has failed/invalid input.

- ▶ Repeat the operation.
- ▶ Watch the display and refer to the operating instructions if necessary.

You cannot listen to messages on the T-Net box.

Your phone system is set for pulse dialling.

- ▶ Set your phone system to tone dialling.

The calls list does not indicate a time for a message.

Date/time are not set.

- ▶ Set the date/time (page 9).

The answering machine announces "PIN is incorrect" during remote operation.

1. System PIN entered is incorrect
 - ▶ Repeat input of system PIN,
2. System PIN is still set to 0000.
 - ▶ Change system PIN to a number other than 0000 (page 54).

The answering machine does not record any messages/has switched over to 'announce only'.

Its memory is full.

- ▶ Deleting old messages.
- ▶ Play back new messages and delete.

Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

www.siemens.com/customer-care

or by referring to the section entitled **Questions and answers** in this manual (page 58).

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi	0 26 42 38 00	Luxembourg	43 84 33 99
Argentina	0 80 08 88 98 78	Macedonia	02 13 14 84
Australia	18 00 62 24 14	Malaysia	03 21 63 11 18
Austria	05 17 07 50 04	Malta	00 35 32 14 94 06 32
Bahrain	40 42 34	Mauritius	2 11 62 13
Bangladesh	0 17 52 74 47	Mexico	01 80 07 11 00 03
Belgium	0 78 15 22 21	Morocco	22 66 92 09
Bosnia Herzegovina	0 33 27 66 49	Netherlands	0900-3333102
Brazil	0 80 07 07 12 48	New Zealand	08 00 27 43 63
Brunei	02 43 08 01	Norway	22 70 84 00
Bulgaria	02 73 94 88	Oman	79 10 12
Cambodia	12 80 05 00	Pakistan	02 15 66 22 00
Canada	1 88 87 77 02 11	Philippines	0 27 57 11 18
China	0 21 50 31 81 49	Poland	08 01 30 00 30
Croatia	0 16 10 53 81	Portugal	8 00 85 32 04
Czech Republic	02 33 03 27 27	Qatar	04 32 20 10
Denmark	35 25 86 00	Romania	02 12 04 60 00
Dubai	0 43 96 64 33	Russia	(800) 200 10 10
Egypt	0 23 33 41 11	Saudi Arabia	0 22 26 00 43
Estonia	06 30 47 97	Serbia	01 13 22 84 85
Finland	09 22 94 37 00	Singapore	62 27 11 18
France	01 56 38 42 00	Slovak Republic	02 59 68 22 66
Germany	01805 333 222	Slovenia	0 14 74 63 36
Greece	0 80 11 11 11 16	South Africa	08 60 10 11 57
Hong Kong	28 61 11 18	Spain	9 02 11 50 61
Hungary	06 14 71 24 44	Sweden	0 87 50 99 11
Iceland	520 3000	Switzerland	08 48 21 20 00
India	01 13 73 85 89 - 98	Taiwan	02 25 18 65 04
Indonesia	0 21 46 82 60 81	Thailand	0 22 68 11 18
Ireland	18 50 77 72 77	Tunisia	71 108 108
Italy	02 66 76 44 00	Turkey	0 21 65 79 71 00
Ivory Coast	80 00 03 33	Ukraine	8 80 05 01 00 00
Jordan	0 64 39 86 42	United Arab Emirates	0 43 31 95 78
Kenya	2 72 37 17	United Kingdom	0 87 05 33 44 11
Kuwait	2 45 41 78	USA	1 88 87 77 02 11
Latvia	7 50 11 14	Vietnam	45 63 22 44
Lebanon	01 44 30 43		
Libya	02 13 50 28 82		
Lithuania	8 22 74 20 10		

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Authorisation

Your Gigaset is intended for operation in your country, as depicted on the underside of the base station and the packaging. Country-specific conditions have been taken into account. The CE mark certifies conformity of the device with the essential requirements of the R&TTE directive.

Excerpt from the original declaration:

"We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with ANNEX V of the R&TTE-Directive 99/5/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/5/EC is ensured"
Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. In case of need, a copy of the original DoC can be made available via the company hotline.

CE 0682

Specifications

Recommended batteries

(Valid at the time of going to press)

Nickel-metal-hydride (NiMH):

- ◆ Sanyo Twicell 650
- ◆ Sanyo Twicell 700
- ◆ Panasonic 700mAh "for DECT"
- ◆ GP 700mAh
- ◆ Yuasa Technology AAA Phone 700
- ◆ Varta Phone Power AAA 700mAh
- ◆ GP 850 mAh
- ◆ Sanyo NiMH 800
- ◆ Yuasa Technologies AAA 800

The handset is supplied with recommended batteries.

Handset operating times/ charging times

Capacity	800 mAh
Standby time	approx. 150 hours (6 days)
Calling time	approx. 10 hours
Charging time	approx. 10 hours

The operating and charging times apply only when using the recommended batteries.

Base station power consumption

In standby mode: approx. 2 watts

During a call: approx. 3 watts

General specifications

 
DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base station power supply	230 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20 % to 75 % relative humidity
Dialling mode	DTMF (tone dialling)/DP (dial pulsing)
Base station dimensions	153 x 123 x 83 mm (L x W x H)

Handset dimensions	141 x 51 x 28 mm (L x W x H)
Base station weight	252 g
Weight of handset with battery	120 g

Default setting

On purchase, your Gigaset S445 is preset with this default setting. You can restore the default setting (page 54, page 55).

Default settings of base station

Function	Default setting	Page
First ringtone suppressed	on	page 50
Flash time	100 ms	page 56
Internal join-in	off	page 42
List type calls list	Missed Calls	page 20
Handset: name	"INT 1" to "INT 6"	page 43
Network provider preselection	Preset according to country	page 22
Pause: line seizure	3 s	page 57
Pause: R key	800 ms	page 57
Pause: access code	3 s	page 57
Fast access 	on Integrated answering machine	page 39
SMS notification/ notification number	off/no number	page 29
SMS incoming and draft messages list	empty	page 25
SMS function	on	page 31
SMS info services	10 preset	page 31
SMS send centre		page 30
System PIN	0000	page 40
Access code	none	page 56
Dialling mode	DTMF	page 56
Answering machine		

Function	Default setting	Page
Answering machine	on	page 33
Announcement	standard	page 34
Recording time	120 s	page 36
Messages	deleted	page 35
Personal announcement/announcement only	deleted	page 33
Answer	after 20 s	page 36

Default settings of the handset

Function	Default setting	Page
Battery tone/ Key click/ Confirmation tone	on	page 51
Auto answer	on	page 49
Room monitor	off	page 44
Room monitor: sensitivity/number	high/ no number	page 44
Base station selection	Base 1	page 41
Display language	country-specific	page 48
Volume: handsfree talking/loudspeaker/ringtone, alarm clock, appointment	3/1/5	page 49
Listen-in (answering machine)	on	page 36
Night mode	off	page 48
Emergency number	112	page 53
EATONI predictive text	on	page 63
Alarm clock/appointment	off	page 52
Character set	standard	page 63

PC Interface

You can connect the handset to your computer using a data cable (page 69).









 
 
Your computer can communicate with your handset using a program (free download at www.siemens.com/gigaset440445).

You can access your handset's directory and load sounds from the computer on to the handset.

During the transfer of data between handset and PC, you will see **Data Transfer** on the display. During this time, it is not possible to use the keypad and incoming calls will be ignored.

Writing and editing text

The following rules apply when writing a text:

- ◆ Control the cursor with    .
- ◆ Characters are added to the left of the cursor.
- ◆ Press the star key   briefly to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the star key   before entering the letter.
- ◆ Press and **hold** the star key   : Shows the selection line of the characters assigned to the star key.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Writing an SMS/name (without predictive text)

 

When you press a key and **hold** it, the characters of that key appear in the **bottom display line** and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field.

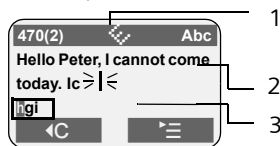
You can see in the display whether upper case, lower case or digits are selected:

- ◆ 'A' or 'a' appears on the bottom display line when you make an entry in the directory.
- ◆ 'Abc', 'abc' or '123' appears at the top right of the screen when an SMS is entered.


Writing SMS (with predictive text)

EATONI predictive text helps you when you are writing an SMS.

 
Each key between  and  is assigned several letters and characters (see the character set tables, page 64). These appear in a selection line immediately under the text panel (over the display keys) as soon as you press a key. The letter you are most likely looking for is reverse-highlighted and is at the beginning of the selection line. It is copied into the text panel.



- 1 EATONI is activated
- 2 SMS text
- 3 Selection line

If this letter is the one you want, confirm it by pressing the next key. If it is not the one you want, **briefly** press the hash key  repeatedly until the required letter is reverse-highlighted on the display line and copied into the text panel.

Appendix

If you press and **hold** the hash key , you will see the selection line of characters that are assigned to the hash key.

Deactivating/activating predictive text

Requirement: You are writing an SMS.



Press the display key.

Predictive Text


Select and press **OK** (✓ = on).



Press the end call key **briefly** to return to the text panel.
Enter the text.

Order of directory entries

 
 



The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:

1. Space (shown here as )
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will now move to the beginning of the directory. Names which you have preceded with an asterisk will move to the end of the directory.

Entering special characters

Standard characters

				
	*)	**))		
1x	Space	Space	.	Abc--> 123 #
2x	1		,	123 --> @ abc
3x	£	1	?	* \
4x	\$	€	!	/ &
5x	¥	£	0	(§
6x	□	\$	+)
7x		¥	-	<
8x		□	:	=
9x			¿	>
10x			¡	%
11x			"	
12x			'	
13x			;	
14x			—	


*) Directory and other lists

**) When writing an SMS

Menu tree

Instead of scrolling to locate a menu function, you can select a menu function faster by opening the menu and keying in the digit combination ("Shortcut").

Example:

With the telephone in **idle status**, press  (open main menu):

1 SMS

You have activated an SMS mailbox (general or private) without a PIN

1-1	Write Message
1-2	Incoming 00+00
1-3	Outgoing

You have activated an SMS mailbox or 2-3 mailboxes with a PIN

1-1	Mailbox	1-1-1	Write Message		
		1-1-2	Incoming 00+00		
		1-1-3	Outgoing		
1-2 to 1-4	Mailbox 1 Mailbox 2 Mailbox 3	1-2-1 to 1-4-1	Write Message		
		1-2-2 to 1-4-2	Incoming 00+00		
		1-2-3 to 1-4-3	Outgoing		
1-5	SMS Service				
1-5	SMS Service	1-5-1	Info Centre		
		1-5-2	Ordering		
1-6	Settings	1-6-1	Service Centres	1-6-1-1	Service Centr.1
				...	[to]
				1-6-1-5	Service Centr. 5
		1-6-2	SMS Mailboxes	1-6-2-1	Mailbox
				1-6-2-2	Mailbox 1
				1-6-2-3	Mailbox 2
				1-6-2-4	Mailbox 3
		1-6-3	Notify Number		
		1-6-4	Notify Type		
		1-6-5	Status Report		

Menu tree

3 Add. Features

3-1	Room Monitor
3-2	Walky-Talky

4 Audio Settings

4-1	Ringer Settings	4-1-1	Ext. Calls
		4-1-2	Internal Calls
		4-1-3	Appointments
		4-1-4	Alarm
		4-1-5	All
4-2	Advisory Tones		

5 H/Set Settings

5-1	Date/Time				
5-2	Display	5-2-1	Screen Picture		
		5-2-2	Colour Scheme		
		5-2-3	Contrast		
		5-2-4	Night Mode		
5-3	Handset	5-3-1	Language		
		5-3-2	Auto Answer		
		5-3-3	Add. Emerg. No		
		5-3-4	Register H/Set	5-3-4-1	Base1
				...	[to]
				5-3-4-4	Base4
		5-3-5	Select Base	5-3-5-1	Base1
				...	[to]
				5-3-5-4	Base4
				5-3-5-5	Best Base
		5-3-6	Reset Handset		

5-4	Base	5-4-1	Audio Settings	5-4-1-1	Ringer Settings
		5-4-2	System PIN		
		5-4-3	Base Reset		
		5-4-4	Add. Features	5-4-4-1	Dialling Mode
				5-4-4-2	Recall
				5-4-4-3	Repeater Mode
				5-4-4-4	Access Code
				5-4-4-5	Listening In
		5-4-5	Preselection	5-4-5-1	Preselect. No.
				5-4-5-2	With Preselect
				5-4-5-3	Without Presel.

6 Answer Machine

6-1	Set Key 1	6-1-1	Network Mailb.		
		6-1-2	Answer Machine		
6-2	Ans Machine				
6-3	Call Screening	6-3-1	Handset		
		6-3-2	Base		
6-4	Announcements	6-4-1	Rec Announce		
		6-4-2	Play Announce		
		6-4-3	Del Announce		
		6-4-4	Rec Anc Only		
		6-4-5	Play Anc Only		
		6-4-6	Del Anc Only		
		6-4-7	Set Ans. Mode	6-5-7-1	Ans. & Record
				6-5-7-2	Announce Only
				6-5-7-3	Ans Mode Time
6-5	Message Length				
6-6	Ring Delay				

7 Calendar

7-1	Set Appoints.
7-2	Alarm Clock
7-3	Missed Dates

8 Sound Manager

9 SMS Service

Accessories

Gigaset Handsets

Turn your Gigaset into a cordless telephone system:

Gigaset Handset S44

- ◆ Illuminated colour display (4096 colours)
- ◆ Graphic main menu with icons
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphone ringer melodies
- ◆ Directory for around 200 entries
- ◆ SMS (CLIP must be enabled)
- ◆ Voice-activated dialling
- ◆ PC interface for managing directory entries
- ◆ Headphone socket
- ◆ Walk and Talk

www.siemens.com/gigaset44



Gigaset Handset SL44

- ◆ Unusual design
- ◆ Illuminated colour display (4096 colours)
- ◆ Graphic main menu with icons
- ◆ Handsfree talking
- ◆ Polyphone ringer melodies
- ◆ Recording ringer melodies via the handset
- ◆ Directory for around 200 entries
- ◆ SMS (CLIP must be enabled)
- ◆ Voice-activated dialling
- ◆ PC interface for managing directory entries
- ◆ Headphone socket
- ◆ Walk and Talk
- ◆ "Balloon Shooter" game

www.siemens.com/gigaset44



Gigaset Handset C34

- ◆ Illuminated graphic display
- ◆ Polyphone ringer melodies
- ◆ Handsfree talking
- ◆ Directory for around 100 entries
- ◆ SMS (CLIP must be enabled)
- ◆ Room monitor
- ◆ Timer

www.siemens.com/gigasetc34



Voice and data adapter Gigaset M43 USB

Use the Gigaset M34 USB for wireless connections between your PC and Gigaset. Then you can:

- ◆ Make low-cost calls via the Internet (ADSL) on your Gigaset handset (Voice-over-IP)
- ◆ Enjoy wireless surfing on the Internet from your PC (ISDN)
- ◆ Write, send and receive text messages on your PC
- ◆ Have Internet messages (e.g. weather, share prices) displayed on your handset
- ◆ Send and receive texts from messenger services (IMS)
- ◆ Operate your PC remotely via the handset (e.g. operating the Windows Media Player)

www.siemens.com/gigasetm34usb



Gigaset repeater

The Gigaset repeater can be used to increase the reception range of your Gigaset handset to the base station.

www.siemens.com/gigasetrepeater



Mobile handsfree set with P2T key

With the mobile handsfree set you can make a call while keeping your hands free.



Data Cable DCA-500

For connecting your phone to the serial RS232 interface of your computer.

Data Cable USB DCA-510

For connecting your phone to the USB interface of your computer.

All accessories and batteries are available from your mobile phone retailer.

Or you can order direct online via the online shop: www.siemens.com/shop.

The Online Shop also has the latest product information.



Only use original accessories. This will avoid possible health risks and damage, and also ensure that all the relevant regulations are complied with.

Index

A

- Access code 56
 - on a PABX 56
 - pause 57
- Access protection 54
- Acknowledge tones 51
- Activate
 - advisory tones 51
 - answering machine 33
 - answering machine (remote operation) 38
 - appointment 52
 - auto answer 49
 - intern join-in 42
 - muting ringtone 50
 - room monitor 44
 - two-way recording of call 35
- Activating
 - handset 9
 - keypad lock 9
- Advisory tones 51
- Alarm clock 52
- Alert tone 50
- Anniversary 17
 - display missed 53
 - not accepting 53
 - storing in directory 17
- Announcement
 - (answering machine) 33, 34
- Announcement mode
 - (answering machine) 33, 34
- Answering machine 33
- Answering machine list 20
- Answering machine, see T-Net box
- Appointment 53
- Assigning a digit key 47
- Assigning key 47
- Attachment (SMS) 28
- Attachment, see Appendix
- Auto answer 13, 49
- Automatic network provider code ... 22
- Automatic redial 19
- Available memory 16

B

- Base station
 - changing 41
 - changing the name of
 - the base station 41
 - connecting and setting up 6
 - connecting the device 7
 - connecting to PABX 56
 - range 6
 - restoring default settings 55
 - setting 54
 - system PIN 54
- Battery
 - charging 8
 - display 8
 - icon 8
 - inserting 7
 - low beep 51
 - recommended batteries 61
- Best base station 41
- Birthday, see Anniversary
- Brightness (display) 48

C

- Call
 - accepting 13
 - connect participant 42
 - end 13
 - external 13, 14
 - forwarding (connect) 43
 - forwarding (connecting) 42
 - internal 41
 - pick up from answering machine .. 35
 - two-way record 35
- Call acceptance 36
- Call waiting
 - internal call 42
- Call-by-Call list 15
 - key 1
- Call-by-Call numbers 15
- Calling
 - external 13
- Calling back caller 21
- Calling back from calls list 21
- Calling Line Identification 13
- Calls list 19, 20
- Cancelling (operation) 10
- Care of the telephone 58

Index

- Change
 - display language 48
 - loudspeaker volume 49
- Changing
 - destination number 44
 - dialling mode 56
 - emergency number 53
 - internal number of a handset 43
 - name of handset 43
 - name of the base 41
 - pause time 57
 - PIN 54
 - ringtone 49
 - system PIN 54
- Character set table special characters
- Charge saving function 36
- Charge status display 8
- CLI, CLIP 13
- Confirmation beep 51
- Connection, Base station to PABX. 56
- Consultation (intern) 42
- Control key 1, 9
- Correcting wrong inputs 11
- Customer Care 60
- D**
- Deactivate
 - advisory tones 51
 - answering machine 33
 - appointment 52
 - auto answer 49
 - intern join-in 42
 - muting ringtone 50
 - room monitor 45
 - two-way recording of call 35
- Deactivating
 - appointment reminder 53
 - handset 9
 - keypad lock 9
- Default settings
 - base station 55, 62
 - handset 54, 62
- Delete
 - announcement for
 - answering machine 33
 - message 35
- Delete key 10
- Deleting
 - anniversary 53
 - appointment 53
 - characters 11
 - from calls list 21
 - voice pattern 18
- De-registering (handset) 41
- Dialling mode 56
- Dialling
 - call-by-call list 15
 - directory 15
 - speed dialling 47
 - voice dialling 18
- Dialling pause 57
 - entering 1
- Dialling, emergency number 53
- Directory 15
 - copying number from text 17
 - managing entries 16
 - open 9, 10
 - order of entries 64
 - saving entry 15
 - sending entry/list to handset 16
 - store number of sender (SMS) 28
 - storing anniversary 17
 - use for number entry 17
- Display 1
 - available memory 16
 - brightness 48
 - change display language 48
 - contrast 48
 - emergency number 53
 - in idle status 10
 - missed anniversaries 53
 - missed appointments 53
 - night mode 48
 - number (CLI/CLIP) 13
 - screen picture 48
 - setting 48
 - T-Net box message 39
 - wrong language 48
- Display key
 - assigning 47
- Display keys 1, 10
- DP (pulse dialling) 56
- Draft message list (SMS) 25
- E**
- Earpiece mode 14
- Earpiece volume 49
- EATONI (predictive text) 63
- Email address 26
- Email directory 18

Emergency number	53
End call key	1, 13
End, call	13
Ending, see Deactivate	
Entry	
delete from calls list	21
saving, changing (Preselection)	23
select from directory	15
selecting (menu)	9
Error beep	51
Escape key	10
Example	
menu input	11
multiple line input	12
External call	
diverting to answering machine	35

F

Fast access	
answering machine	37
assigning key 1	1
T-Net box	39
Fax (SMS)	26
Flash time	56

G

Group call	41
----------------------	----

H

Handset	
activating/deactivating	9
advisory tones	51
change name	43
change number	43
changing for best reception	41
changing internal number	43
changing to another base station	41
contact with liquid	58
de-registering	40, 41
display language	48
forwarding call	42
idle status, returning to	10
list	9, 10
loudspeaker volume	49
muting	14
night mode	48
operating and charging times	61
paging	41
preparing for use	7
reception strength	6

registering	40
registering on another	
base station	41
restoring default settings	54
screen picture	48
setting (individual)	47
use room monitor	46
using room monitor	44
using several	40
Handset charging times	61
Handset operating time	
in room monitor mode	44, 46
Handsfree key	1
Handsfree talking	14
Hash key	1, 9
Hearing aids	5

I

Icon	
alarm clock	52
answering machine	33
appointment	52
battery	8
display	10
for new messages	35
keypad lock	9
new message	34
new SMS	27
ringtone	50
Idle status (display)	10
Incoming message list (SMS)	27
Info services (SMS)	31
Input language (SMS)	25
Insert email addresses in SMS	25
Insert picture in SMS	25
Insert sounds in SMS	25
Intern	
consultation	42
join-in	42
Internal	
making calls	41
Internal call	41
call waiting	42

J

Join-in on a call	42
-----------------------------	----

K

Key 1 (fast access)	1, 37
Keypad lock	9

Index

Keys

Call-by-Call keys	1
cancel key	10
control key	1, 9
delete key	10
display keys	1, 10
end call key	1, 13
escape key	10
fast access	1, 37
handsfree key	1
hash key	1, 9
menu key	10
message key	1
On/Off key	1
recall key	1
star key	1, 50
talk key	1, 13

L

Language, Display	48
Last number redial	19
Linking, see SMS	
Liquid	58
List	

answering machine list	20
Call-by-Call list	15
calls list	19
email directory	18
handsets	9, 10
missed calls	21

Listen in during recording	36
----------------------------	----

Lock

activating/deactivating keypad lock	9
Loudspeaker volume	49

M

Mailbox ID, see SMS	
Mailboxes, see SMS	
Mains adapter	5

Making calls

accepting a call	13, 14
external	13
internal	41

Making cost-effective calls	22
-----------------------------	----

Manual last number redial	19
---------------------------	----

Medical appliances	5
--------------------	---

Menu

back one menu level	10
end tone	51
entry	9

key	10
menu guidance	10
menu input	11
open	9, 10
overview	65

Message

icon for new message	34
playback	34

Message key

opening lists	19
setting to flashing	19

Message LED	19
-------------	----

Message list

open list	27
-----------	----

Messages	33
----------	----

delete	35
key	1
marking as "new"	35

Microphone	1
------------	---

Missed

appointment	53
-------------	----

Missed call	21
-------------	----

Multiple line input	12
---------------------	----

Muting

first ring	50
------------	----

Muting handset	14
----------------	----

N

Name

changing the base station	41
of handset	43

Network provider (number list)	15
--------------------------------	----

Network provider code,

automatic	22
-----------	----

Night mode	48
------------	----

Not accepted

anniversary	53
-------------	----

Notification via SMS	29
----------------------	----

Number

adding to directory	17
as destination for room monitor	44
copying from directory	17
copying from SMS text	28
display calling number (CLIP)	13
entry with directory	17
saving in directory	15

Number list

network provider	15
------------------	----

O

On/Off key	1
Operating time for handset	61
Operation (preparing to use the phone)	6
Order of entries in directory	64

P**PABX**

connecting base station	56
pause after access code	57
pause times	57
setting dialling mode	56
setting flash time	56
SMS	31
storing access code	56
switch to touch tone dialling	57

Pack contents	6
-------------------------	---

Paging	41
------------------	----

Paging, handset	41
---------------------------	----

Pause	57
-----------------	----

PC Interface	63
------------------------	----

Phone jack assignment	7
---------------------------------	---

Phoning

internally	41
----------------------	----

Playback

announcement (answering machine)	33
message (answering machine)	34

Playing

voice pattern	18
-------------------------	----

Power consumption	61
-----------------------------	----

Predictive text	63
---------------------------	----

Preparing for use

handset	7
-------------------	---

Preparing to use

phone	6
-----------------	---

Preselection	22
------------------------	----

suppress	23
--------------------	----

Protect phone from access	54
-------------------------------------	----

Pulse dialling	56
--------------------------	----

Q

Questions and answers	58
---------------------------------	----

R

Range	6
-----------------	---

Recall key	1
----------------------	---

Reception booster, see Repeater

Reception strength	6
------------------------------	---

Recording

two-way recording of call	35
voice pattern	17

Recording time/quality	36
----------------------------------	----

Registering (handset)	40
---------------------------------	----

Reminder call	17
-------------------------	----

Remote operation	36, 37
----------------------------	--------

Repeater	54
--------------------	----

Ring delay	49
----------------------	----

Ringtone

changing	49
--------------------	----

muting	50
------------------	----

set melody	49
----------------------	----

set volume	49
----------------------	----

setting	9
-------------------	---

R-key

pause after	57
-----------------------	----

Room monitor	44, 46
------------------------	--------

activating	46
----------------------	----

sensitivity	46
-----------------------	----

S

Safety precautions	5
------------------------------	---

Screen picture	48
--------------------------	----

Searching in directory	15
----------------------------------	----

Sending

directory entry to handset	16
--------------------------------------	----

Sensitivity (room monitor)	44
--------------------------------------	----

Sensitivity, room monitor	46
-------------------------------------	----

Service	60
-------------------	----

Set date	9
--------------------	---

Set melody	49
----------------------	----

Set time	9
--------------------	---

Setting

screen picture	48
--------------------------	----

Setting up, base station	6
------------------------------------	---

Shortcut	65
--------------------	----

Signal beep, see Advisory tones

Skip back	35
---------------------	----

Skip forward	35
------------------------	----

SMS	24
---------------	----

active send service centre	24
--------------------------------------	----

changing mailbox	30
----------------------------	----

deleting	26
--------------------	----

diverting	27
---------------------	----

draft message list	25
------------------------------	----

info services	31
-------------------------	----

input language	25
--------------------------	----

linked	24
------------------	----

listening to melody in an attachment	28
---	----

Index

mailbox ID	29
mailboxes	29
notification number	29
notification type	29
notification via SMS	29
PIN protection	29
reading	26
receiving	27
replying to or diverting	27
rules	24
saving a melody in an attachment.	28
self-help with error messages	32
sending as fax	26
sending to a personal mailbox	30
sending to email address	26
status report	25
store number	28
to PABX	31
troubleshooting	32
use data (SMS).	28
SMS centre	
changing number	30
setting	30
Sound Manager.	50
Sound, see Ringtone	
Special characters	64
Special functions.	56
Specifications	61
Speed dialling	15, 47
Star key.	1, 50
Storing (access code).	56
Suppress	
preselection.	23
System settings.	54

T

Talk key.	1, 13
Text	
writing, editing	63
Text message, see SMS	
T-Net box	39
touch tone dialling	57
Troubleshooting	58
Troubleshooting (SMS)	32

U

Unknown	14
Unknown caller.	14
Use data (SMS)	28
Using Walk and Talk as a	
room monitor	46

V

View T-Net box message	39
VIP (directory entry)	16
Voice dialling	17
dialling	18
initiating.	9
Voice pattern	
deleting	18
playing	18
recording	17
Volume	
earpiece	49
handset loudspeaker	49
loudspeaker	49
ringer	49
ringtone	49
setting	49

W

Wait melody.	14
Walk and Talk	
activating/deactivating	46
setting	45
Warning beep, see Advisory tones	
Writing (SMS).	24
Wrong inputs (correcting)	11